

MIXER PLUS

4 HDMI Professional Video Switcher



User Manual

Contents

1.Product Introduction	5
1.1 Overview	5
1.2 Main Features	5
2. Interface	6
2.1 Interface Introduction	6
3. Specifications	7
4. Front Panel	8
4.1 Front Panel Introduction	8
.....	8
.....	8
5、 Functions	10
5.1 Transition Control	10
5.2 Function Keys	10
5.3 Camera Control Operations	10
5.4 Key Button Light Status	11
6. Status Page Display	12
7. Main Menu	13
7.1 Transition	13
7.1.1 Transition Effect Settings	13
7.1.1.1 MIX	14
7.1.1.2 DIP	14
7.1.1.3 WIPE	14
7.1.2 Transition Duration Setting	14
7.1.3 FTB Settings	14
7.1.4 Softening Setting	14
7.1.5 DIP Settings	15
7.2 Audio	15
7.2.1 PGM Audio Settings	16
7.2.2 Four-Channel HDMI Input Audio Settings	17
7.2.2.1 Mix Mode Settings	17
7.2.2.2 Volume Control	17
7.2.2.3 Audio Delay	17
7.2.3 Two Microphone Input Audio Settings	18
7.2.3.1 Mix Mode Settings	18
7.2.3.2 Volume Control	18
7.2.3.3 Audio Delay	18

7.2.3.4 Audio Mode Settings	19
7.2.3.5 ALC Settings	19
7.2.4 Headphone Settings	19
7.3 Picture-In-Picture	20
7.3.1 Enable Picture-In-Picture	20
7.3.2 Picture-In-Picture Setup	20
7.3.2.1 Source Selection	21
7.3.2.2 Size Selection	21
7.3.2.3 Picture-In-Picture Position Adjustments	21
7.3.2.4 Custom Size	21
7.3.3 Crop	22
7.3.3.1 Crop Size Adjustment	22
7.3.3.2 Crop Position Adjustment	22
7.3.4 Borders	23
7.3.4.1 Border Width	23
7.3.4.2 Border Color	23
7.4 Luma Key	24
7.4.1 Enable Luma Key	24
7.4.2 Key Sources	25
7.4.3 Filling Sources	25
7.4.4 Adjustment	25
7.4.4.1 Threshold	26
7.4.4.2 Gain	26
7.4.4.3 Inverse	26
7.4.5 Mask	26
7.4.5.1 Mask Switch	27
7.4.5.2 Mask Position Adjustment	27
7.4.5.3 Mask Width Adjustment	27
7.4.5.4 Mask Height Adjustment	27
7.5 Chroma Key	27
7.5.1 Enable Chroma Key	28
7.5.2 Key Sources	28
7.5.3 PickColor	28
7.5.4 Similarity	29
7.5.5 Smoothness	29
7.5.6 Mask	29
7.5.6.1 Mask Switch	29

7.5.6.2 Mask Position Adjustment	30
7.5.6.3 Mask Width Adjustment	30
7.5.6.4 Mask Height Adjustment	30
7.6 DSK Key	30
7.6.1 Enable DSK	31
7.6.2 Key Sources	31
7.6.3 Threshold	31
7.6.4 Gain	31
7.6.5 Inverse	31
7.6.6 Mask	31
7.6.6.1 Mask Switch	32
7.6.6.2 Mask Position Adjustment	32
7.6.6.3 Mask Width Adjustment	32
7.6.6.4 Mask Height Adjustment	32
7.7 PTZ	32
7.7.1 Camera Selection	33
7.7.2 Search	34
7.7.3 Manual IP Setting	34
7.7.4 Speed Setting	34
7.7.5 Focus	34
7.7.6 Exposure	35
7.7.7 White Balance	35
7.8 Images	36
7.9 Port	37
7.9.1 Layout	38
7.9.2 PGM Output	40
7.9.3 AUX Output	40
7.9.4 LCD Output	40
7.9.5 Frame Rate Setting	40
7.9.6 Input Source Screen Flip	41
7.10 System	41
7.10.1 System Settings	42
7.10.1.1 Language Settings	42
7.10.1.2 OSD Time Setting	43
7.10.1.3 Backlight	43
7.10.1.4 Key Brightness	43
7.10.1.5 Version Information	43

7.10.2 T-Bar Calibration	43
7.10.3 Network Settings	43
7.10.4 Signal Status	44
7.10.5 MEM Settings	44
7.10.6 Reset	44
8. Host Computer Software	45
8.1 Connect To The Host Computer Software	45
8.1.1 Computer Connect To The Host Computer Software	45
8.2 Settings Page	46
8.2.1 Transition Setting Menu	46
8.2.2 Picture-In-Picture Setup Menu	47
8.2.3 Key ON/OFF Setting Menu	48
8.2.4 Transition Menu	48
8.3 Audio Settings Page	49
8.4 Key Settings Page	49
8.5 PTZ Camera Settings Page	50
8.6 System Settings Page	50
8.6.1 LOGO UPDATE	51

1. Product Introduction

1.1 Overview

The Mixer Plus features four HDMI inputs (all supporting resolutions up to 1920x1080 @ 60p), one HDMI PGM output, one HDMI AUX output, and one USB 3.1 (Type-C) output.

The Mixer Plus video switcher is built on an FPGA hardware platform, supporting broadcast-grade features including video effects, transition, chroma keying, audio mixing and adjustment, PIP (Picture-in-Picture) with flexible positioning and sizing, arbitrary LOGO placement, and multi-layer overlay. The Mixer Plus video switcher features a 4-inch LCD screen for direct multi-view signal monitoring, while its PTZ control joystick enables precise operation of multiple PTZ cameras.




1.2 Main Features

- 4 Channel HDMI input, PGM OUT x 1 + AUX x 1 output, USB 3.1 x 1 lossless output
- PGM supports up to 6 layers, providing powerful production capabilities
- 1 Picture-In-Picture, Supports any cropping and size adjustable to meet the needs of various scenarios
- 1 LOGO, supports Alpha channel
- Supports up to 30 Transition effects
- 1 UVC output for direct USB streaming
- Support for external background images (PAT)
- Supports DSK, allows for subtitles and other functions
- Integrated PTZ camera control for streamlined operation
- Professional Chroma key to create a realistic virtual studio
- Luma key to help users achieve video effects

2. Interface

2.1 Interface Introduction

Note 1: To update firmware: 1. Place the mcu.bin file in the root directory of a FAT32 USB drive. 2. Insert the USB drive. 3. Power on the device while holding the MENU button.

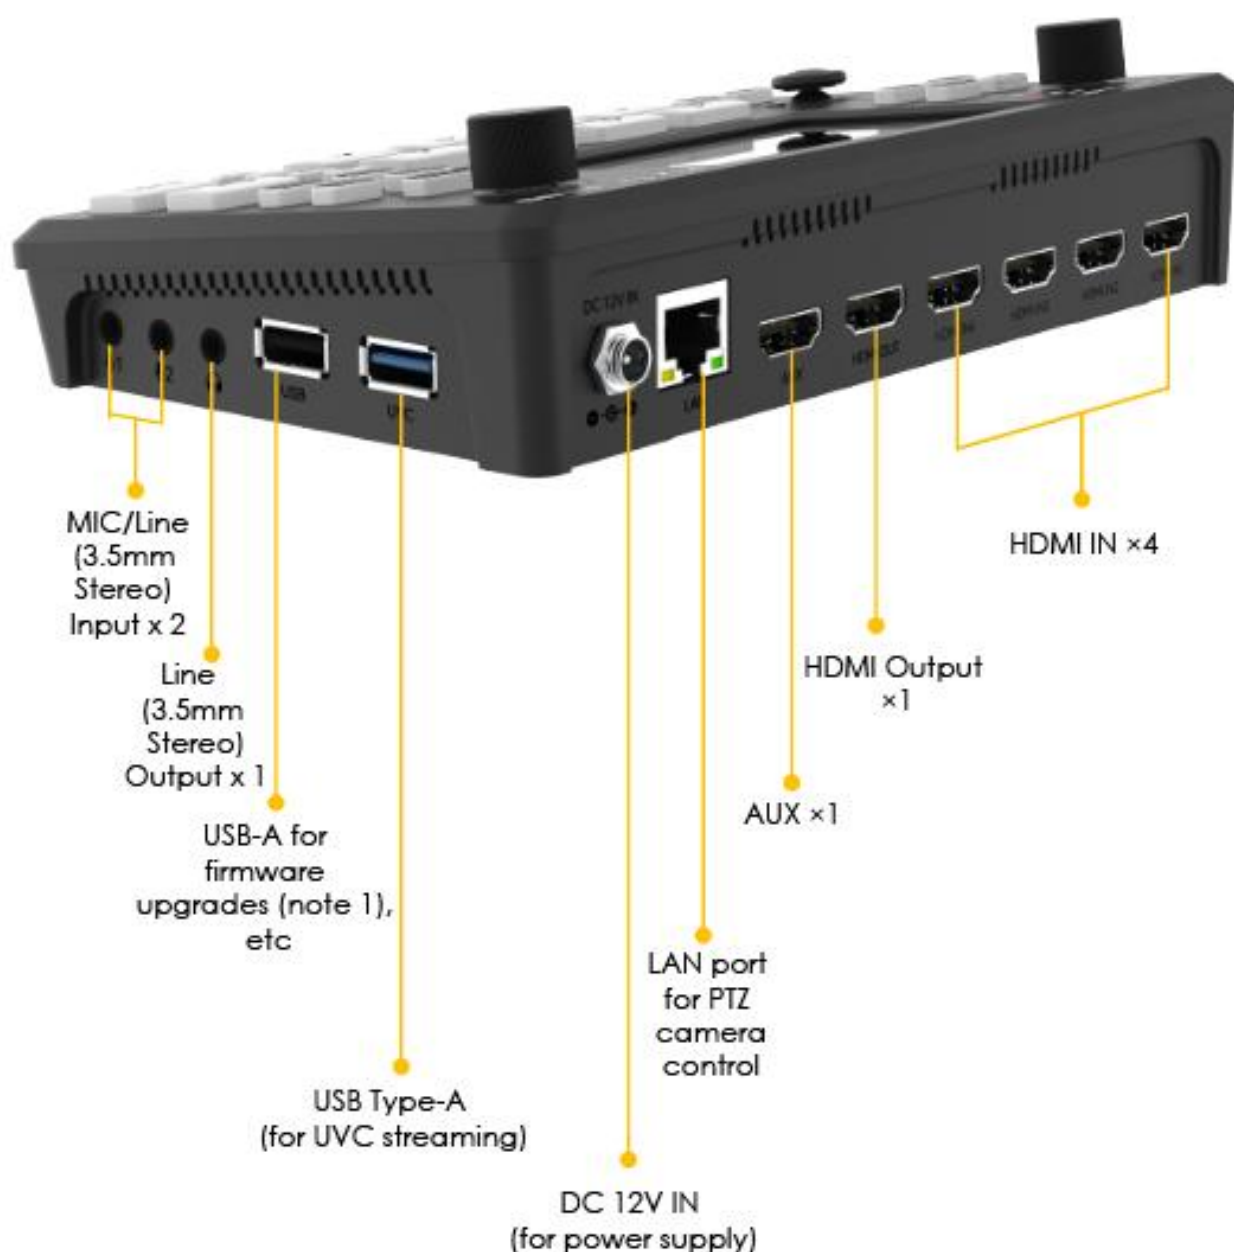

3. Specifications

Inputs / Outputs	
Video In	HDMI IN x 4
Video Output	HDMI PGM Out x 1, HDMI AUX Out x 1, USB 3.1 Type-A (UVC) x 1
Audio Input	MIC/Line (3.5mm Stereo) x 2
Audio Output	Line (3.5mm Stereo) x 1
USB	Used for images, firmware upgrades, etc
Control Interface	LAN x 1 is used for PTZ camera control
Power Source	DC 12V x 1
Functions	
Transition	AUTO / CUT
Transition Effects	WIPE (multiple patterns) /MIX/DIP/STILL (freeze) /FTB(Fade To Black)
Key	Upstream key: Luma key x 1/Chroma key x 1/PIP x 1 Downstream key: DSK x 1/LOGO x 1
Layer	PGM supports up to 6 layers
Audio	HHDMI x 4, audio delay: -30ms-500ms Microphone / analog audio input x 2, audio delay: 0ms-500ms
PTZ	VISCA IP protocol
LOGO	Supports arbitrary position adjustment and alpha transparency channel (png images)
Format Support	
HDMI Input Support	1080p 60/59.94/50/30/29.97/25/24/23.98 1080i50/1080i60
HDMI OUT / AUX Output	1080p 60/50/30/25/24 1080i50/1080i60
UVC Output	USB 3.1 lossless output, maximum support YUV2 1080p60
Media Format Support	USB disk format support: FAT32 Image format support: bmp; size support: 1920*1080
Other	
Voltage	7~24V
Power Consumption	≤10W
Size (L x D x W)	189 x49 x 109mm
Weight	393g
Temperature	Operating temperature: -20℃~50℃, storage temperature: -20℃~60℃
Accessories	Power Adaptor (12V 2A) x1; USB cable (A to A) x1

4. Front Panel

4.1 Front Panel Introduction



01	KNOB	Menu navigation Function selection
	MENU	Access system menu
02	KEY	In conjunction with the mode selection knob, the PVW window opens brightness cutout, chroma cutout, picture-in-picture, DSK, logo effect
	ON AIR	In conjunction with the mode selection knob, the PGM window opens Luma key, chroma key, picture-in-picture, DSK, logo effects
03	MEM	Recalls saved user settings
	MV	LCD screen display switch. When on, the white light is on and the LCD screen displays multiple pictures; when off, you can monitor IN1, IN2, IN3, IN4, PAT, Clean PGM, PGM, Clean PVW, and PVW single picture.
04	FTB	When turned on, the light flashes, the PGM output fades to black
	STILL	Enable the frame freeze effect. When enabled, the red light is on
	CUT	Instant switching between PVW and PGM
	AUTO	PVW and PGM transition using selected transition effect

05	PVW:1-4	Shows the currently selected PGM output indicated by the button illuminated red.
06	PGM:1-4 / E-STOP / PAT	PVW signal source, E-STOP, PAT selection and indication, button is illuminated green when active
07	CAM / POS / ZOOM- / ZOOM+	CAM: Enables/disables PTZ camera control mode. When enabled, the button is illuminated white POS: Used to save or recall camera preset positions To Save a Preset: Enable CAM mode, press POS, then press a PVW1-4 button. To Recall a Preset: Enable CAM mode, press POS, then press a PGM1-4 button. ZOOM-/ZOOM+: Controls the PTZ camera's zoom function.
	PTZ	Camera control, controls the coordinates of the camera Position control: 1. Control the layer position in conjunction with the PIP button. 2. Control the mask position. 3. Control the LOGO position. 4. PickColor in chroma key function
08	Lock Screen /Power	Press the power button to power on the unit
	Button	When on, short press to flash the red light and lock the front panel button. Long press to shut down the switcher
	AUDIO	Audio shortcut keys
09	Mode Selection Knob	1. Select rotation mode for brightness, chroma, PIP, DSK, and LOGO 2. Short press the knob, PIP/LOGO indicator light flashes, and move the position with PTZ

5. Functions

5.1 Transition Control

The transition control is composed of keys PVW1-4, PGM1-4, CUT, AUTO, PAT and E-STOP

Keypad PAT: Used to control the source selection of the current layer in the PVW (preliminary monitoring screen)

E-STOP button: used to control the source selection of the current layer in the PVW preview screen

Key PVW1~4: used to control the source selection of the current layer in the PVW preview screen

Key PGM1~4: used to control the source selection of the corresponding layer of the broadcast picture (PGM)

Press the CUT button: For cutting between the PVW and PGM inputs

Key AUTO: PVW and PGM automatically switch effects according to transition time setting and transition effect setting

5.2 Function Keys

MV: LCD display switching. When activated, the white indicator light illuminates while the LCD screen displays multiple monitoring screens. When MV is deactivated, the indicator light turns off and the LCD screen displays a single monitoring screen, which can monitor IN1, IN2, IN3, IN4, PAT, Clean PGM, PGM, Clean PVW, and PVW single screens.

STILL: Creates a freeze frame from the current input.

FTB: After pressing the FTB button, the PGM output fades to black and the FTB light flashes; press it again to exit.

Audio: Can be used to quickly adjust the volume of the 4 HDMI inputs, 2 MIC inputs, 1 headset input and PGM

MEM: By entering the settings menu and going to MEM option, you can save your user setting. Select the desired user and click the MEM button. You can then access your saved settings.

5.3 Camera Control Operations

After connecting the camera, the PTZ camera is controlled by pressing the CAM, POS, PTZ joystick, PVW1-4 and PGM1-4 keys.

To activate the camera short press the CAM button, and the light will turn on to show that you have entered the camera control mode.

Motion control: After activating the camera, you can control the horizontal and vertical movement of the camera through the PTZ joystick.

Camera position saving: After activating the camera, press the POS button to enter the camera position setting mode. Press any of the 4 PVW buttons to save the current position of the camera, up to 4 positions can be saved.

Camera position recall: After activating the camera, press the POS button to enter the camera location setting mode. Press the PGM1-4 button that corresponds to the PVW button used to save the position.

Button ZOOM-/ZOOM+: Zoom function for PTZ camera lens.

5.4 Key Button Light Status

Keylight	Off	On	Flashing
MV	Single screen monitoring	Multi-screen monitoring	
CAM	Not in camera control	Activate camera controls	
POS			Wait for the camera position to be set
PGM1~4	The source is not selected	The corresponding source is selected	
PVW1~4	The source is not selected	The corresponding source is selected	
E-STOP	The source is not selected	Select E-STOP as the source	
PAT	The source is not selected	Select PAT as the source	
CUT	Switch signal sources		
AUTO	Transition is over	Automatic transition in progress	
FTB			Fade to black in progress
STILL		Freeze frame mode enabled	
Lock Keys			Front panel buttons locked

6. Status Page Display




① UMD show	⑦ PTZ camera position number and lens movement speed display
② MIC 2 audio level display	⑧ Loaded LOGO preview
③ MIC 1 audio level display	⑨ Transition time and special effects display
④ PGM audio level display	⑩ Audio inputs volume display
⑤ HDMI input audio level display	⑪ Model Name
⑥ Cinetreak Logo	⑫ Multi-screen output frame rate
⑬ info information display	


7. Main Menu

7.1 Transition

The video switcher has built-in WIPE, MIX, DIP and other professional transition effects, which can be enabled with the AUTO button.

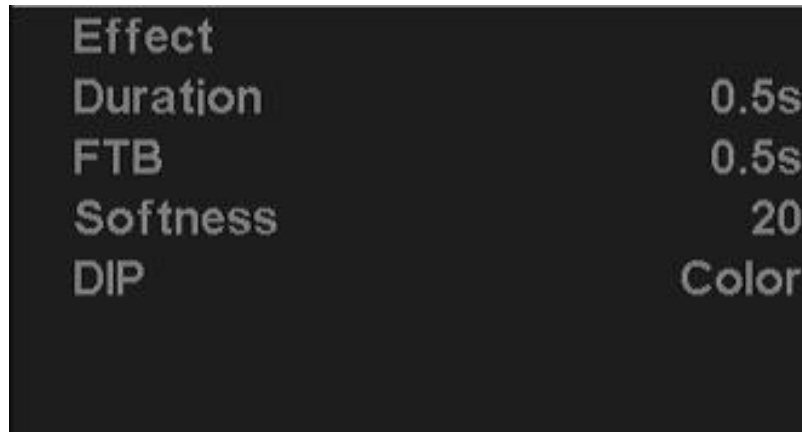

LCD transition Settings

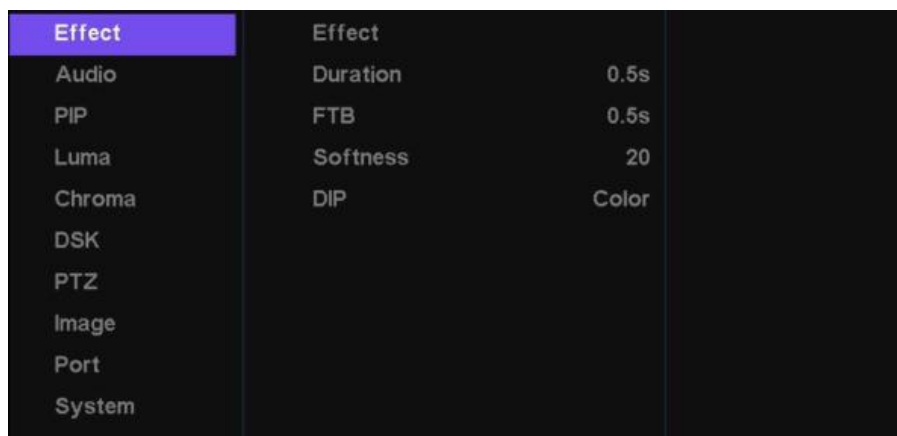

MV multi-screen transition Settings

7.1.1 Transition Effect Settings

Enter the transition settings, click the transition effect, enter the transition effect page, including MIX, DIP, WIPE and other 30 transition effects, the default is MIX transition effect.



LCD transition effects

7.1.1.1 MIX

Select MIX, click the AUTO button, and execute the MIX transition effect.



7.1.1.2 DIP

Select DIP, click the AUTO button to execute the DIP transition effect. With the source settings, you can select the DP source. The default source is color, and the default color is black.

DIP to Black (fade out):



7.1.1.3 WIPE

WIPE is a transition effect that “wipes” from one source to another. Users can rotate the knob to select different WIPE styles and soften the edge of the wipe.

7.1.2 Transition Duration Setting

Enter the transition settings, click the transition duration, and set the transition duration by rotating the knob. The longer the duration, the slower the transition speed. You can set the duration from 0.1s - 5.0s. 0.5s is the default.

7.1.3 FTB Settings

Enter the transition settings, click FTB, and set the duration of FTB by rotating the knob. The longer the duration, the slower the speed of FTB. The duration 0.1s-5.0s can be set, and the default is 0.5s.

Click the FTB button, then and the red light will flash as the PGM source fades to black

7.1.4 Softening Setting

In the transition setting, click Softening and set the softening by turning the knob. The lower the softening, the clearer the edges of the transition will be. You can set it to 1-100, default is 20.

7.1.5 DIP Settings

In the transition settings, click "DIP Source". You can select the DIP source by rotating the knob. Customize settings include color, IN1, IN2, IN3, IN4, and PAT. The default DIP source is color, with the default color being black.

When the DIP source selection is color you can select the color using the red, green and blue color codes.

DIP Source	Color
Red	0
Green	0
Blue	0

LCD Dip Source Settings

Effect	DIP Source	Color
Audio	Red	0
PIP	Green	0
Luma	Blue	0
Chroma		
DSK		
PTZ		
Image		
Port		
System		

MV Multi-screen Dip Source Settings

7.2 Audio

Supports 4 channels of HDMI digital audio and 2 independent 3.5mm microphone inputs, each channel of audio can be independently adjusted for volume, switch, delay, and IN1-4 supports audio follow mode (AFV).

PGM	On
IN1	AFV
IN2	AFV
IN3	AFV
IN4	AFV
Mic1	On
Mic2	On

LCD audio Settings


Effect	PGM	On
Audio	IN1	AFV
PIP	IN2	AFV
Luma	IN3	AFV
Chroma	IN4	AFV
DSK	Mic1	On
PTZ	Mic2	On
Image	EAR	PGM
Port		
System		

Audio Settings for MV multi-screen

7.2.1 PGM Audio Settings

The unit supports 6 channels of audio overlay, including 4 channels of HDMI embedded audio and 2 channels of MIC/Line audio input.

In audio settings, click PGM to enable or disable PGM audio via the rotary knob. Click Volume to adjust the PGM's volume using the rotary knob. The volume range is -60dB to 0dB. By default, the PGM sound is enabled with a volume of -6dB.

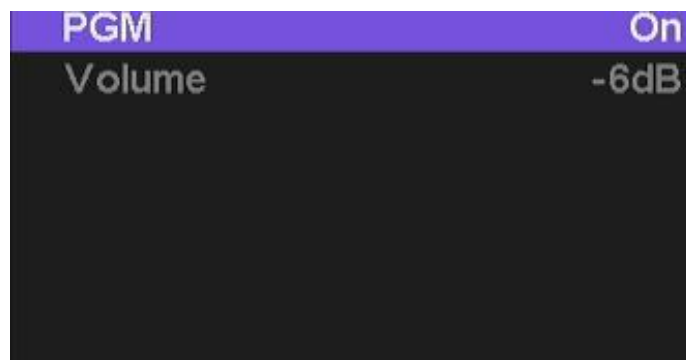


LCD PGM audio Settings

Effect	PGM	On
Audio	Volume	-6dB
PIP		
Luma		
Chroma		
DSK		
PTZ		
Image		
Port		
System		


MV Audio Settings for multi-screen

7.2.2 Four-Channel HDMI Input Audio Settings

Enter the audio settings to set the embedded audio of the 4 inputs

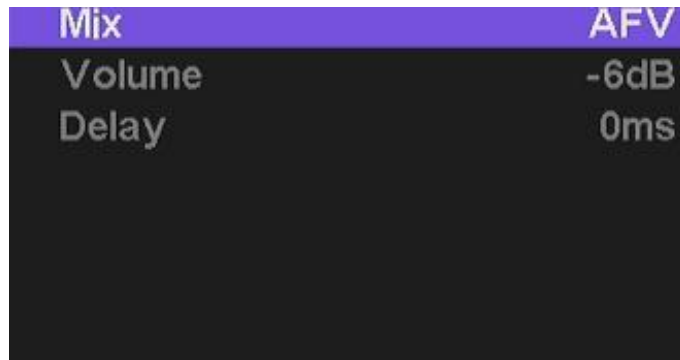

LCD IN1\2\3\4 audio Settings

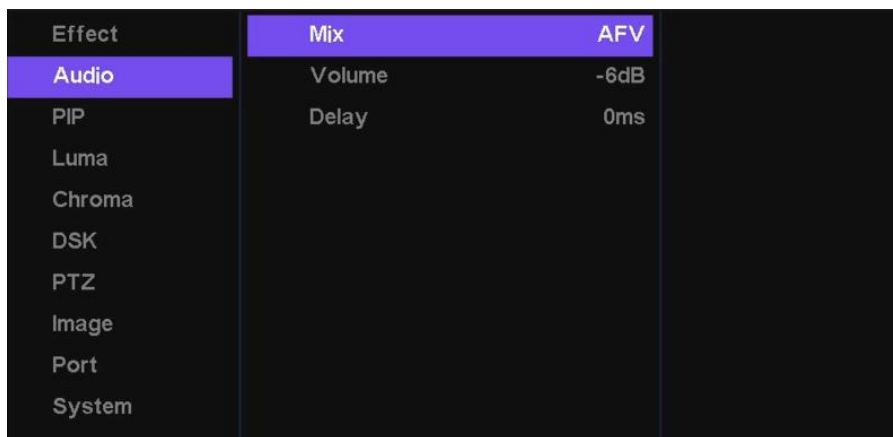

MV Multi-screen IN1\2\3\4 audio Settings

7.2.2.1 Mix Mode Settings

Users can turn on/off the mix mode independently, or set it to AFV audio follow mode, The default is AFV audio follow mode.

When an audio channel is set to AFV, the audio will only be audible when the video is in PGM.

7.2.2.2 Volume Control

Users can adjust the volume of each input audio channel, ranging from -60dB to 0dB, with a default of -6dB.

7.2.2.3 Audio Delay

Users can set the audio delay for the inputs to synchronize the audio and video. The audio delay range is -30ms-500ms, by default 0ms.

0ms delay will automatically synchronize audio and video.

7.2.3 Two Microphone Input Audio Settings

In audio settings, select Microphone 1 and Microphone 2 to configure both channels. Users can connect them to linear devices or desktop/microphone stands. Adjust audio volume, delay, and enable/disable the microphones as needed.

Mix	On
Volume	-6dB
Delay	30ms
Mode	Line
ALC	Off

LCD MIC1/2 audio Settings

Effect	Mix	On
Audio	Volume	-6dB
PIP	Delay	30ms
Luma	Mode	Line
Chroma	ALC	Off
DSK		
PTZ		
Image		
Port		
System		

MV Multi-screen MIC1/2 audio Settings

7.2.3.1 Mix Mode Settings

Users can turn on/off the microphone mixing mode independently, which is enabled by default.

7.2.3.2 Volume Control

Users can adjust the volume of microphone audio on each channel, ranging from -60dB to 0dB, with a default of -6dB.

7.2.3.3 Audio Delay

Users can set the audio delay of MIC1 and MIC2. The maximum audio delay is 500ms, and the default value is 30ms.

7.2.3.4 Audio Mode Settings

If the MIC interface is connected to a microphone device, select the microphone mode for audio; if connected to a line level device, select line mode for audio.

Mode: Select between Microphone and Line input. The default is Line mode.

7.2.3.5 ALC Settings


The ALC feature automatically adjusts the audio gain and makes appropriate adjustments according to the background noise. Users can customize the level by choosing 1, 2, and 3. The default is off.

7.2.4 Headphone Settings

The switcher features a headphone output for audio monitoring. Users can select one audio source from three options: Main Audio (PGM), four embedded HDMI audio channels, or two MIC audio channels. The headphone volume can be adjusted between -60dB and 0dB. The default audio source is set to PGM, with the volume initially at 0dB.




LCD headset audio Settings

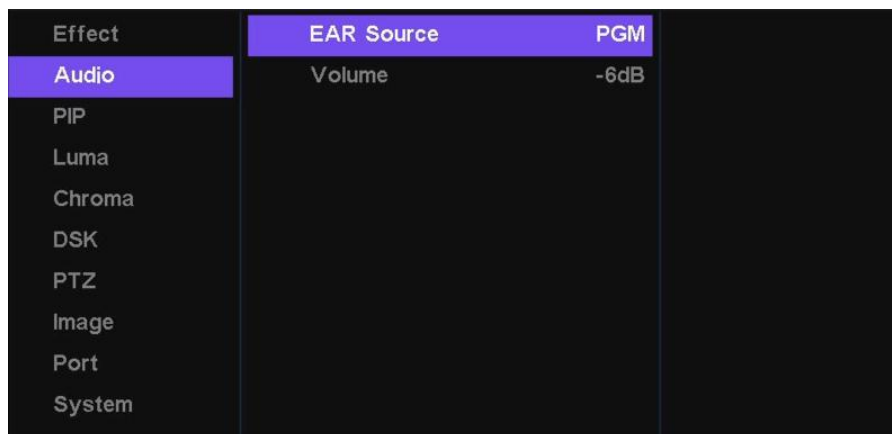


MV Multi-screen headset audio Settings

7.3 Picture-In-Picture

The picture-in-picture setting can support any cropping and size to meet the needs of various scenarios.

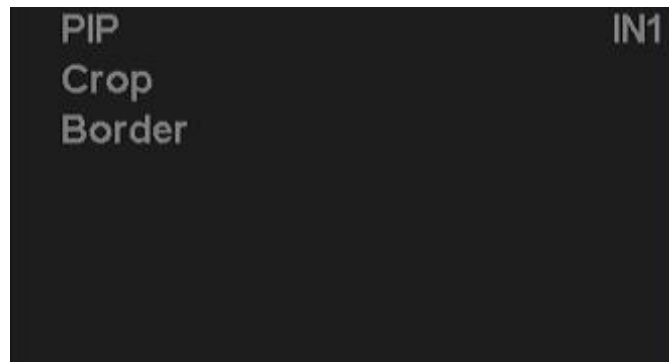

Picture-in-picture Settings

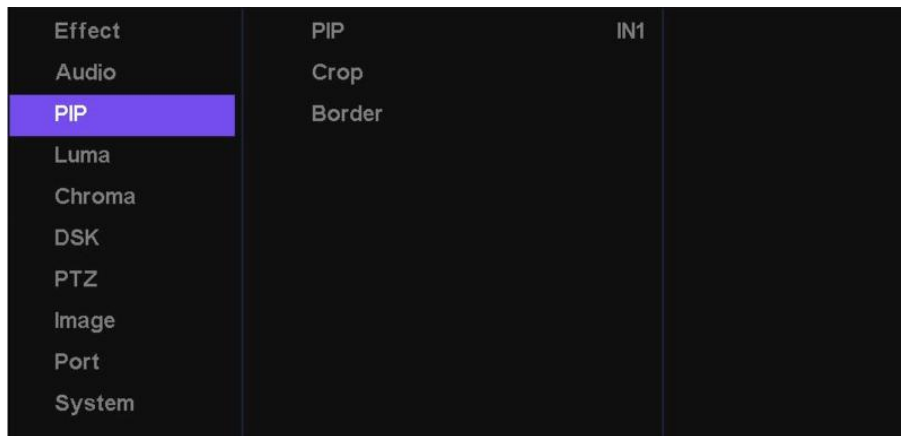

Picture-in-picture Settings for MV multi-screen

7.3.1 Enable Picture-In-Picture


To enable PIP mode: Rotate the mode selection knob to PIP. Press the KEY button to activate the PIP indicator, which will turn green and allow you to open a separate picture-in-picture window in the PVW interface. Press the ON AIR button to activate the PIP indicator, which will turn red and enable a separate picture-in-picture window in the PGM interface. When the PIP indicator turns yellow, both the PGM and PVW interfaces will display the picture-in-picture mode.

7.3.2 Picture-In-Picture Setup


In the picture-in-picture setting, you can set the source, size, and position of the picture-in-picture.

7.3.2.1 Source Selection

Users can choose the source for picture-in-picture. In the picture-in-picture settings, click picture-in-picture - Source and rotate the knob to select IN1, IN2, IN3, IN4, or PAT. The default picture-in-picture is IN1.

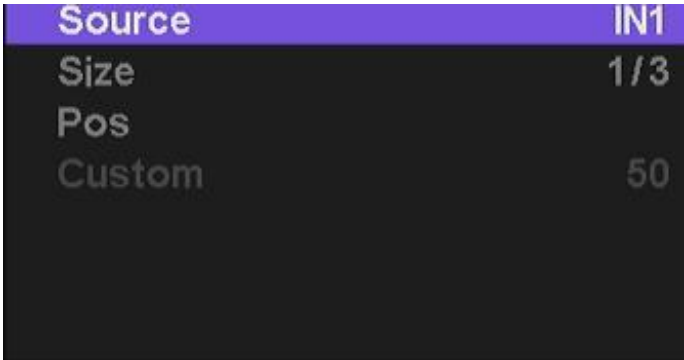

LCD picture-in-picture source setting

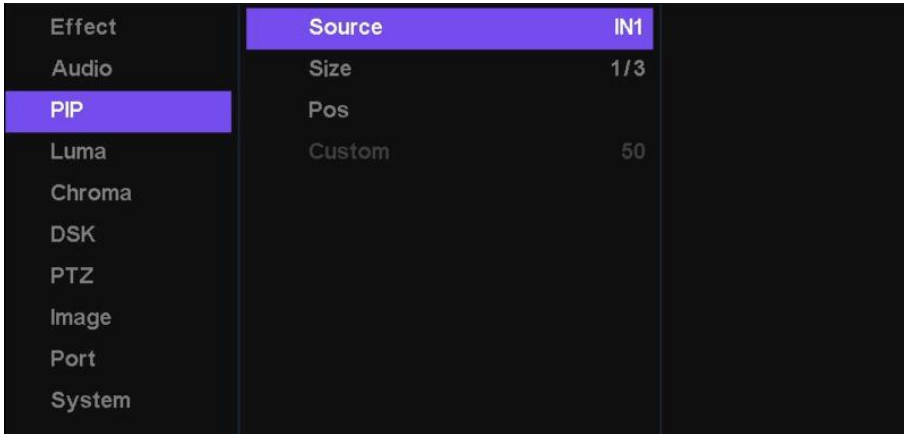

Picture-in-picture source setting for MV multi-screen

7.3.2.2 Size Selection

Users can adjust the size of the picture-in-picture. In the picture-in-picture Settings, click Picture-in-picture-Size, and rotate the knob to select 1/8, 1/6, 1/4, 1/3, 1/2, or custom. The default size of the picture-in-picture is 1/3.

7.3.2.3 Picture-In-Picture Position Adjustments


In the picture-in-picture setting, click picture-in-picture-Position, and adjust the position of the picture-in-picture using the PTZ five-way keys.

7.3.2.4 Custom Size

Users can customize the size of the picture-in-picture. In the picture-in-picture Settings, click Picture-in-picture-Size to select custom; Click Custom, and adjust the size proportionally by rotating the knob. The size ranges from 10 to 70, with a default value of 50.

7.3.3 Crop

The user can use the crop function to select the part of the picture to be displayed in the picture.

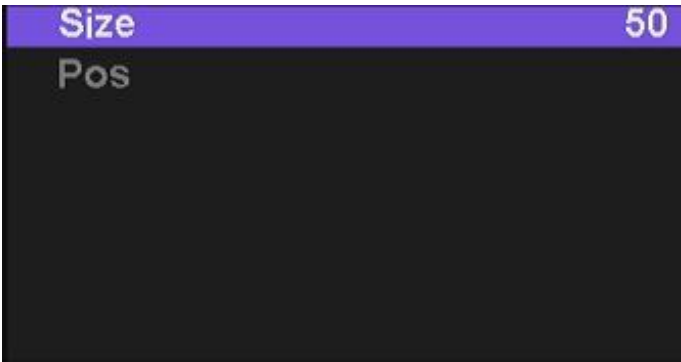

LCD Crop Settings



Crop Settings for MV multi-screen

7.3.3.1 Crop Size Adjustment

In the picture-in-picture setting, click Crop-Size to adjust the size of the crop by turning the knob. The range is 50-100, and the default is 50.

7.3.3.2 Crop Position Adjustment

In the picture-in-picture setting, click Crop-Position and rotate the position of the crop using the PTZ five-way keys.

7.3.4 Borders

Users can customize the border width and color of the picture-in-picture border.

Width	2
Red	128
Green	128
Blue	128

LCD crop border settings

Effect	Width	2
Audio	Red	128
PIP	Green	128
Luma	Blue	128
Chroma		
DSK		
PTZ		
Image		
Port		
System		

MV multi-screen crop border settings

7.3.4.1 Border Width

In the picture-in-picture setting, click Border-Width and adjust the width of the border by turning the knob. The range is 2-16 and the default width is 2.


7.3.4.2 Border Color

In the picture-in-picture setting, click the border and adjust the color codes of red, green and blue by turning the knob to set the border color of the picture-in-picture.


7.4 Luma Key

Luma Key is a technique used in video editing that creates a mask based on luminance (brightness) rather than color. It allows for the removal of specific brightness levels in a video, making certain areas transparent. Enter the Luma key, select the key source and fill source to set the effect of the Luma key. The Luma key can be effective in PVW and PGM.


The threshold adjusts the area where the key source cuts out, and the fill source fills in the area being cut out; the background selected by the signal source will cover the key source image and change as the threshold is adjusted.

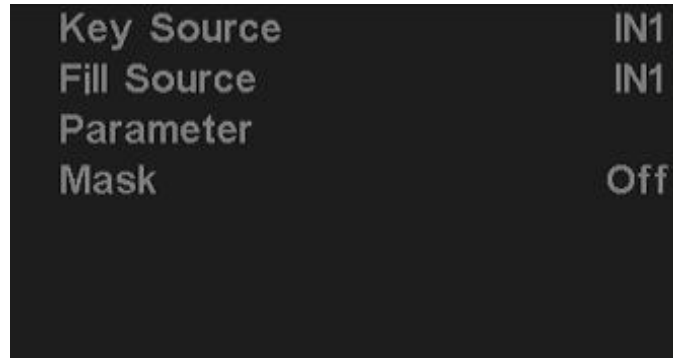

LCD Luma key settings

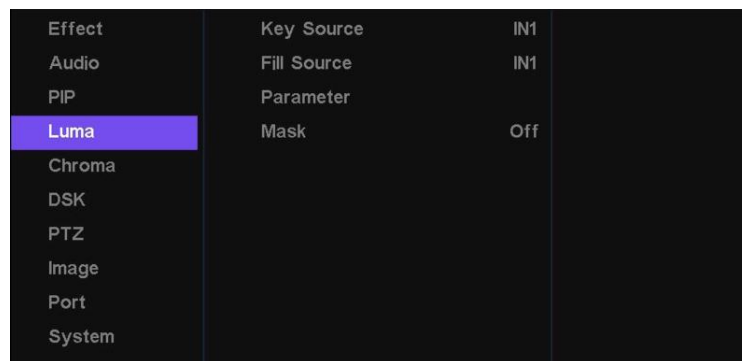

MV multi-screen Luma key settings

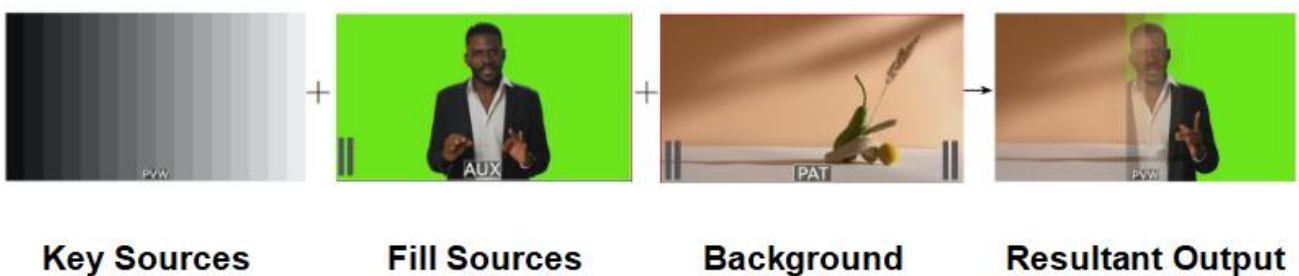

7.4.1 Enable Luma Key

Rotate the mode selection knob to LUMA. Press the KEY button to activate the LUMA indicator, which will turn green. This enables Luma keying effect in the PVW window. Press the ON AIR button to activate the LUMA indicator, which will turn red. This activates Luma keying effect in the PGM window. When the LUMA indicator turns yellow, both the PGM and PVW windows will display the Luma keying effect simultaneously.

7.4.2 Key Sources

Users can customize and adjust the key source. Enter the Luma key settings, click the key source, rotate the knob to select the key source, you can choose IN1, IN2, IN3, IN4. The default key source is IN1.

7.4.3 Filling Sources


Users can customize and adjust the fill source. Enter the Luma key settings, click the fill source, rotate the knob to select the fill source, you can choose IN1, IN2, IN3, IN4, PAT. The default key source is IN1.

7.4.4 Adjustment

Enter the Luma key settings adjustment menu, the Luma key effect is set by adjusting the threshold, gain and Inverse.



LCD Luma key adjustment Settings

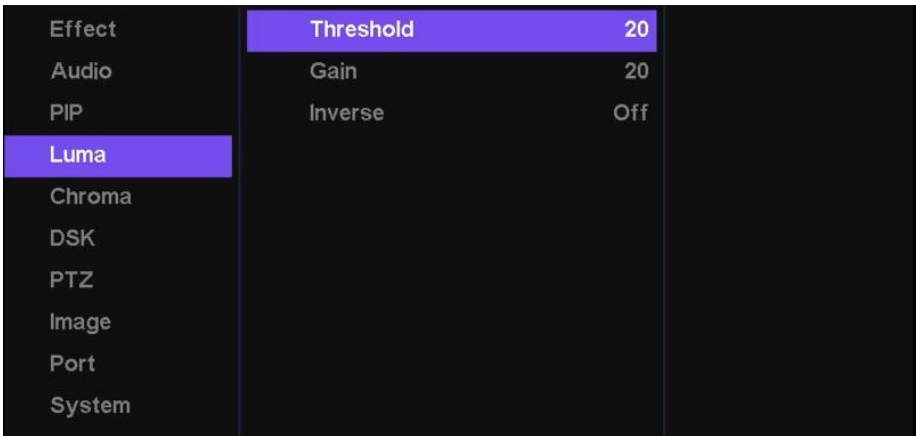

MV multi-screen Luma key adjustment Settings

7.4.4.1 Threshold

In Luma key, the threshold is used to define which brightness range of pixels will be transparent, which directly determines the effect of the keying. When a part of the brightness value in the key source is higher than the threshold, that part is removed and filled with the fill source. Enter the Luma key settings, click adjust-threshold, by turning the knob to adjust the threshold selection, the threshold range from 1 to 100, the default threshold is 20.

7.4.4.2 Gain


In Luma key, the gain sets the smoothness of the border when you draw a cutout. The higher the value, the smoother the border. Enter the Luma key settings, click adjust-gain, by turning the knob to adjust the gain selection, the gain range is from 1 to 100, the default gain value is 20.

7.4.4.3 Inverse

Enter the Luma key setting, click adjust-inverse, and turn the knob to turn on or off the Inverse. Turn on the Inverse, and the area that is removed is less than the threshold. It is closed by default.

7.4.5 Mask

The mask function adjusts the part of the picture displayed by the masking layer.

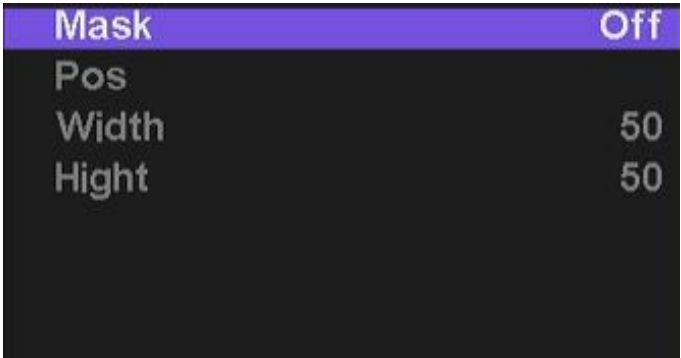

LCD Luma key mask setting



MV multi-screen Luma key mask setting

7.4.5.1 Mask Switch

Enter the Luma key setting, click mask-mask, and adjust the on/off of the mask by turning the knob. The default is off.

7.4.5.2 Mask Position Adjustment

Enter the Luma key setting, click mask-position, you can move the position of the mask through PTZ five-way keys.

7.4.5.3 Mask Width Adjustment

Enter the Luma key setting, click mask-width, and adjust the width of the mask by turning the knob. The range is 10-100, and the default is 50.

7.4.5.4 Mask Height Adjustment

Enter the Luma key setting, click mask-height, and adjust the height of the mask by turning the knob. The range is 10-100, and the default is 50.

7.5 Chroma Key

Chroma key is a visual effects and post-production technique that combines two images or video streams by separating them based on hue (chromatic range). This technology has been widely used across industries to remove backgrounds from photos or videos, particularly in news broadcasting, film production, gaming, live streaming, and related fields.

Key Source	IN1
PickColor	Off
Similarity	38
Smoothness	20
Mask	Off

LCD Chroma key setting

Effect	Key Source	IN1
Audio	PickColor	Off
PIP	Similarity	38
Luma	Smoothness	20
Chroma	Mask	Off
DSK		
PTZ		
Image		
Port		
System		

MV Chroma key setting for multiple screens



7.5.1 Enable Chroma Key


Rotate the mode selection knob to CHROMA. Press the KEY button to activate the CHROMA indicator, which will display green. This enables chroma keying in the PVW window. Press the ON AIR button to activate the CHROMA indicator, which will display red. This activates chroma keying in the PGM window. When the LUMA indicator turns yellow, both the PGM and PVW windows will display chroma keying effects simultaneously.

7.5.2 Key Sources


Users can customize and adjust the key source. Enter the chroma key setting, click the key source, rotate the knob to select the key source, you can choose IN1, IN2, IN3, IN4. The default key source is IN1.

7.5.3 PickColor

Users can customize the key color.
In default mode, the PickColor function is turned off;
Set the PickColor mode, and remove colors from the key source by using the five-directional keys;
Set the user mode and set the color to be deducted by adjusting the red, green and blue color codes.

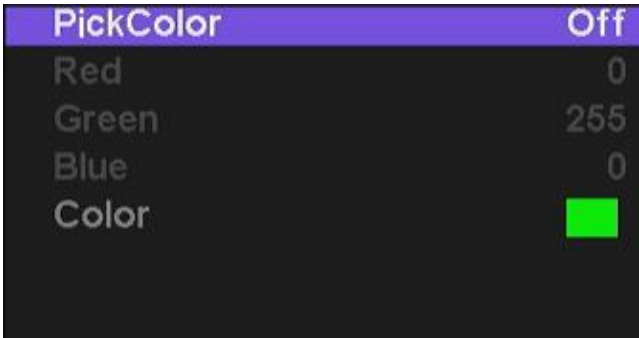

Chroma key color setting

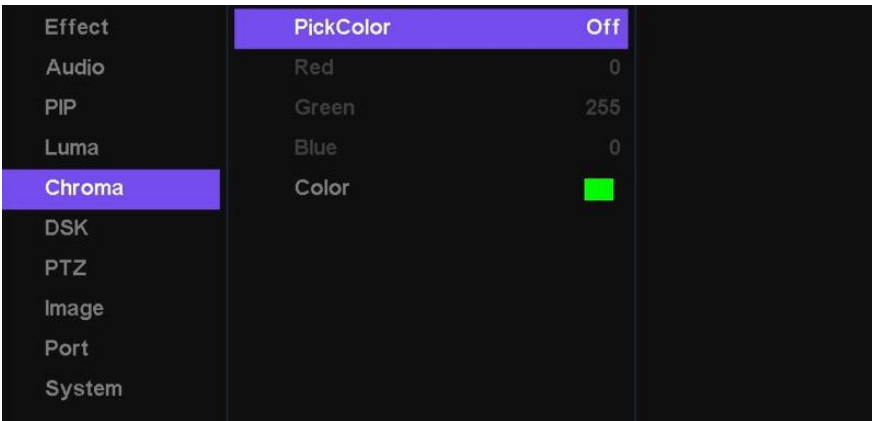

MV multi-screen chroma key color setting

7.5.4 Similarity


In the chroma key settings, the similarity setting sets the range of color similarity for the key. The larger the number, the larger the range of color that will be keyed out. The similarity range ranges from 0 to 100, and the default similarity is 38.

7.5.5 Smoothness

In the chroma key settings, smoothness sets the smoothness of the area around the subject being keyed. The higher the number, the smoother the border. Smoothness ranges from 0 to 100, with a default smoothness of 20%.

7.5.6 Mask

The mask function adjusts the part of the picture displayed by the masking layer.

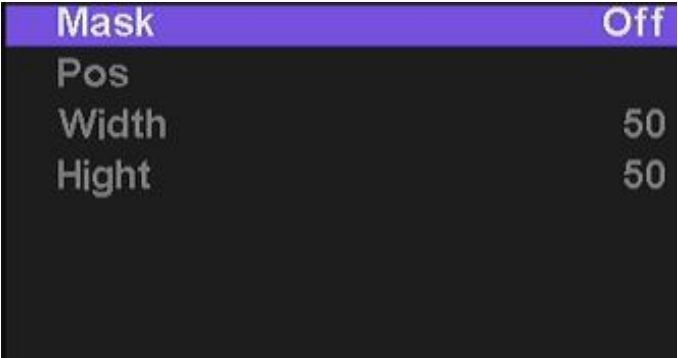

Chroma key mask setting



MV multi-screen chroma key mask setting

7.5.6.1 Mask Switch

Enter the chroma key settings, click mask-mask, and enable the mask by turning the knob. It is off by default.

7.5.6.2 Mask Position Adjustment

In the Chroma key settings, click mask-position to move the mask position through the PTZ five-way key.

7.5.6.3 Mask Width Adjustment


Enter the chroma key setting, click mask-width, and adjust the width of the mask by turning the knob. The range is 10-100, and the default is 50.

7.5.6.4 Mask Height Adjustment


Enter the chroma key setting, click mask-height, and adjust the height of the mask by turning the knob. The range is 10-100, and the default is 50.

7.6 DSK Key

The Mixer plus video switcher supports DSK, allowing users to easily add professional subtitles or graphic packaging system during the broadcast of the program to meet the standards of TV broadcast, thus improving the quality of the program and the viewing experience of the audience.

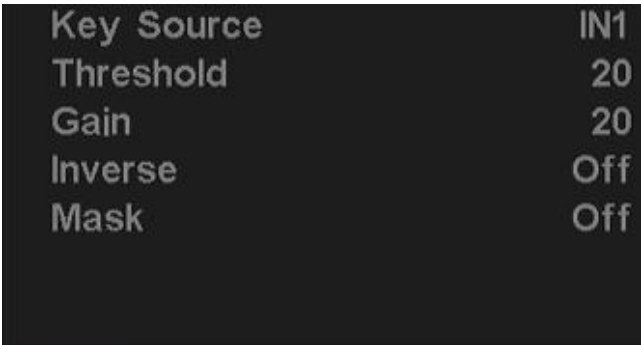

DSK Settings

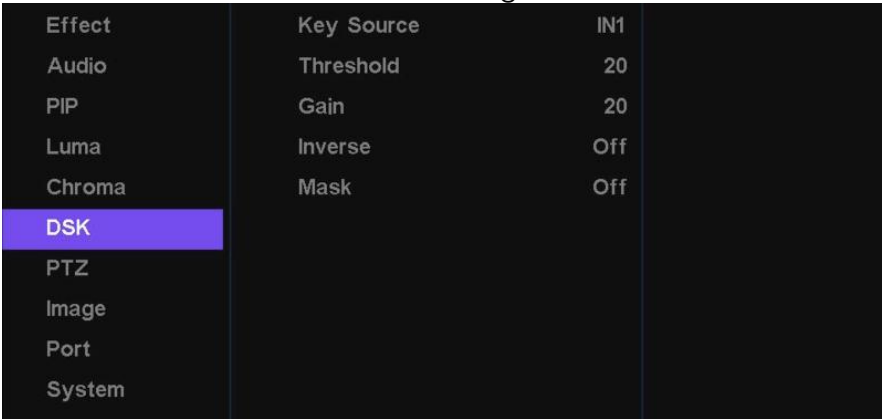

MV Multi-screen DSK Settings



Key Sources

Background

Resultant Output

7.6.1 Enable DSK

To enable DSK mode: Rotate the mode selection knob to DSK. Press the KEY button to activate the DSK effect in the PVW window. Press the ON AIR button to activate the DSK effect in the PGM window. When the DSK indicator turns yellow, enable the DSK effect in both the PGM and PVW windows simultaneously.

7.6.2 Key Sources

Users can customize and adjust the key source. Enter the DSK setting, click the key source, rotate the knob to select the key source, you can choose IN1, IN2, IN3, IN4. The default key source is IN1.

7.6.3 Threshold

In the DSK key settings, the threshold is set in a similar range to the brightness range. The larger the value, the larger the range of the cutout.

Enter the DSK Settings, click Threshold, and adjust the selection of the threshold by turning the knob. The threshold range is from 1 to 100, with a default value of 20.

7.6.4 Gain

In the DSK key settings, the gain sets the smoothness of the border when the drawing is set. The larger the value, the smoother the border.

Enter the DSK Settings, click Gain, and adjust the gain selection by turning the knob. The threshold range is from 1 to 100, with a default threshold of 20.

7.6.5 Inverse


In the DSK key settings, turn on inversion and remove areas that are greater than the threshold. It is disabled by default.

7.6.6 Mask

The mask function adjusts the part of the picture displayed by the masking layer.

Mask	Off
Pos	
Width	50
Hight	50

LCD DSK mask settings

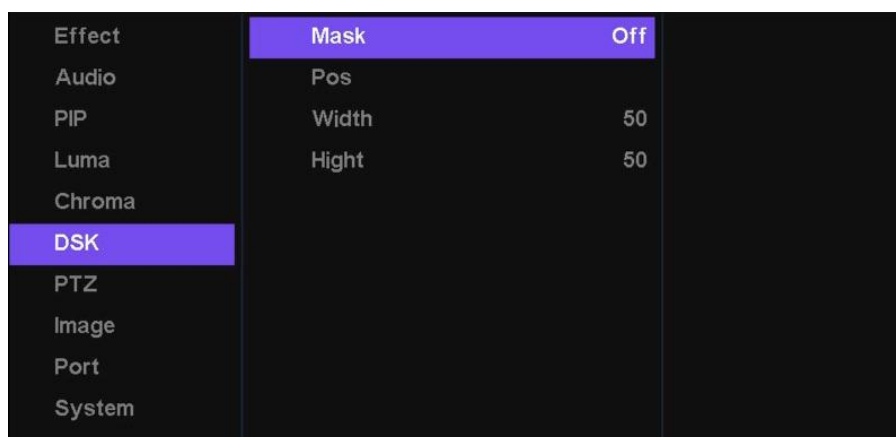

MV multi-screen DSK mask settings

7.6.6.1 Mask Switch

Enter the DSK settings, click mask-mask, and adjust the on/off of the mask by turning the knob. The default is off.

7.6.6.2 Mask Position Adjustment

In the DSK settings, click mask-position to move the mask position using the PTZ five-way key.

7.6.6.3 Mask Width Adjustment

Go to DSK settings, click Mask-Width, and adjust the width of the mask by turning the knob. The range is 10-100, and the default is 50.

7.6.6.4 Mask Height Adjustment

Enter the DSK Settings, click Mask-Height, and adjust the height of the mask by turning the knob. The range is 10-100, and it defaults to 50.

7.7 PTZ

The Mixer Plus video switcher supports the VISCA camera control protocol. The five-way key can be used to control the camera movement quickly and conveniently. Meanwhile, the camera menu can be used to set the camera's focus, exposure, white balance and other settings.

In addition, it also supports the camera position memory function, which can be quickly invoked (see "5.3 Camera Control Operation")

CAM ID	CAM1
Search	Off
IP	
Speed	1
Focus	Off
Exposure	Auto
WB	Off

LCD PTZ Settings

Effect	CAM ID	CAM1
Audio	Search	Off
PIP	IP	
Luma	Speed	1
Chroma	Focus	Off
DSK	Exposure	Auto
PTZ	WB	Off
Image		
Port		
System		

MV multi-screen PTZ Settings

7.7.1 Camera Selection

Enter the PTZ settings, click select camera selection, and select the camera position to be set through the knob.

CAM1	192.168. 3 .133
CAM2	192.168. 3 .142
CAM3	192.168. 3 .134
CAM4	192.168. 3 .142

PTZ IP setting

Effect	CAM1	192.168. 3 .133
Audio	CAM2	192.168. 3 .142
PIP	CAM3	192.168. 3 .134
Luma	CAM4	192.168. 3 .142
Chroma		
DSK		
PTZ		
Image		
Port		
System		

MV multi-screen PTZ IP setting

7.7.2 Search

Enter the PTZ setting, click search, and set the search to on mode by rotating the knob; click IP and it will display all the found IP addresses of cameras on the same LAN, and select the camera IP through the knob.

7.7.3 Manual IP Setting


Enter the PTZ setting, click search, rotate the knob to set the search to off mode; click IP, in the IP address bar, manually set the IP address.

7.7.4 Speed Setting


In the PTZ setting, click speed to adjust the camera lens movement speed by turning the knob. The speed range is 1-24. The higher the value, the faster the lens moves. The default speed is 1.

7.7.5 Focus

Enter the PTZ setting, click Focus-AF(Auto Focus), you can set auto-focus or manual focus; auto-focus setting off mode, click manual, manually focus through the rotation knob; auto-focus setting on mode, automatically focus.

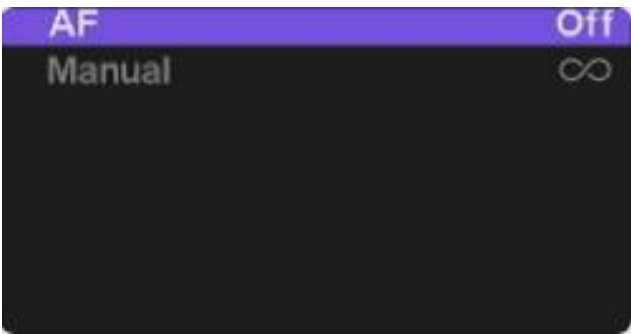


LCD PTZ focus setting

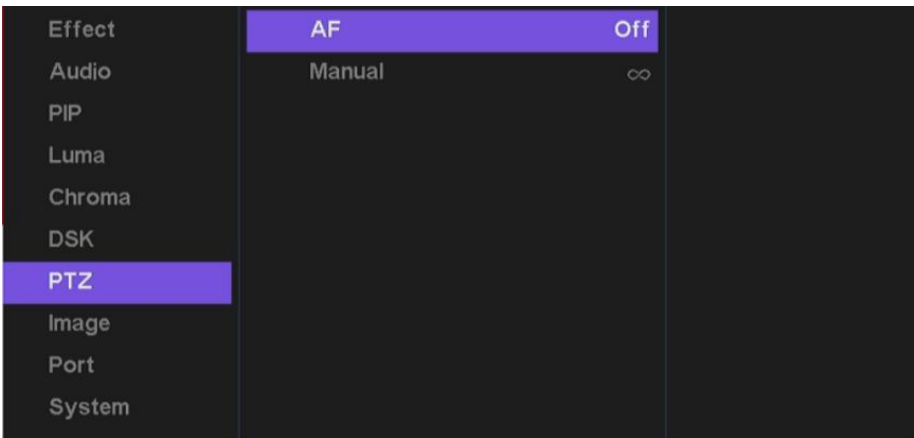


MV multi-picture PTZ focus setting

7.7.6 Exposure

In the PTZ settings, click Exposure to select exposure modes: Automatic, Manual, Shutter Priority, or Aperture Priority. When selecting Manual Exposure, adjust shutter speed and aperture using the knob. With Shutter Priority mode, only the selected shutter speed settings take effect, while Aperture Priority mode applies only the selected aperture settings.

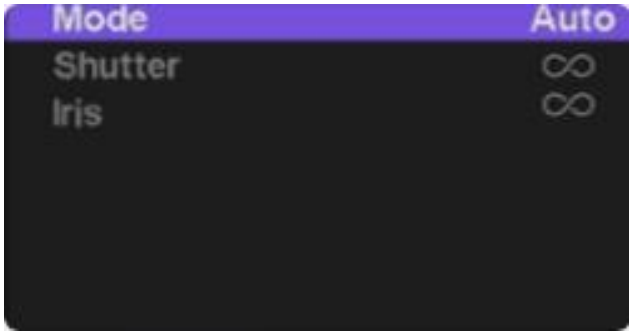


LCD PTZ exposure Settings

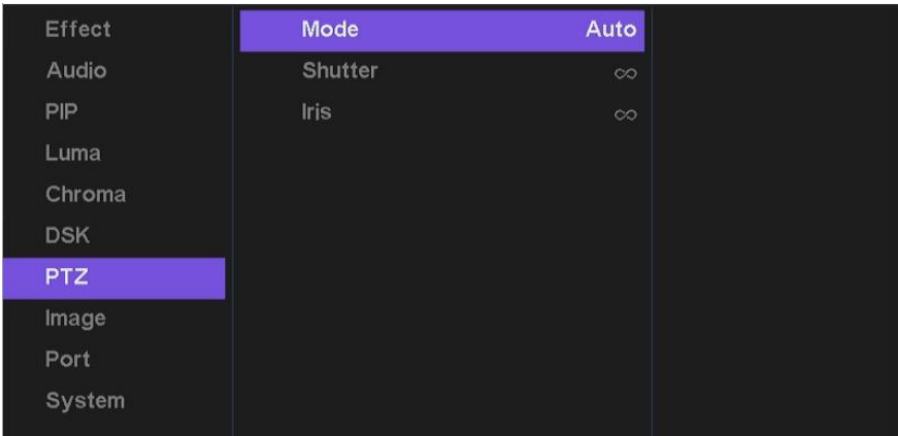

MV Multi-screen PTZ exposure Settings

7.7.7 White Balance

In the PTZ settings, click on White Balance. In Auto White Balance mode, you can set the function to Off or On. When set to Off, you can adjust the red and blue gain values using the knob, with a range of 0-255. The default gain value is 0. When set to On, the system automatically adjusts the white balance.

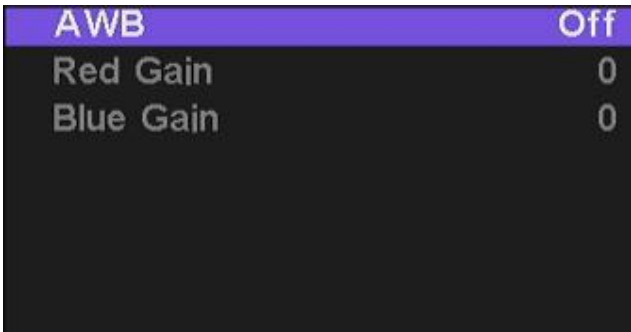

LCD PTZ white balance setting



MV multi-screen PTZ white balance setting

7.8 Images

In the image settings module, set the E-STOP, PAT and LOGO.

7.8.1 Emergency Stop Setting

Enter the image setting, click E-STOP, you can set the E-STOP.


E-STOP can be set to color and color bars. When setting color, it should be used in conjunction with monochrome settings. Monochrome options include white, red, green, blue, yellow, cyan, and purple. In user mode, users can customize the color codes for red, green, and blue.

7.8.2 PAT and LOGO Settings

Go to the image settings, click on PAT, and rotate the knob to select PAT1/PAT2.

Go to the image settings, click on LOGO, and rotate the knob to select LOGO1/LOGO2/LOGO3/LOGO4.

To turn on the LOGO: Select the LOGO mode selection knob, click the KEY button, and the LOGO light will show green. Open the LOGO separately in the PVW window; click the ON AIR button, and the LOGO light will show red, and open the LOGO separately in the PGM window; when the DSK light shows yellow, open the LOGO in both the PGM window and the PVW window.

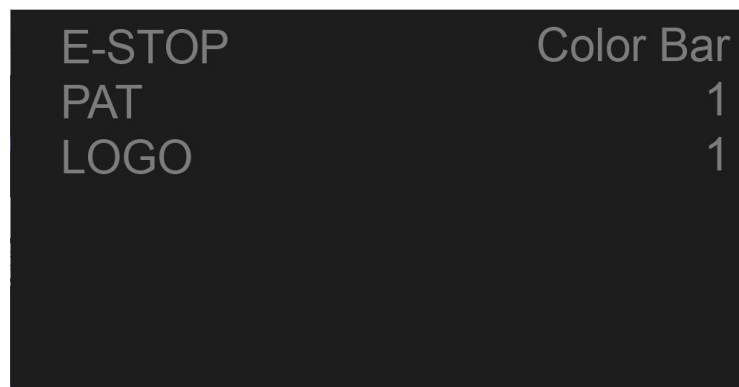

LCD image Settings

Effect	E-STOP	Color Bar
Audio	PAT	1
PIP	LOGO	4
Luma		
Chroma		
DSK		
PTZ		
Image		
Port		
System		

MV Multi-screen image Settings

7.9 Port

In the port setting menu, PGM port output, AUX port output, LCD output, frame rate and screen flip can be set.

View	Hor
PGM Out	MV
Aux Out	MV
LCD Out	PGM
Frame Rate	1080p60
Flip	


LCD port Settings

Effect	View	Ver90
Audio	PGM Out	MV
PIP	Aux Out	MV
Luma	LCD Out	PGM
Chroma	Frame Rate	1080p60
DSK	Flip	
PTZ		
Image		
Port		
System		


MV multi-screen port Settings

7.9.1 Layout

Enter the port settings, click on Layout, and rotate the knob to perform horizontal and vertical operations on the overall layout. Vertical screen supports 90 degrees and 270 degrees vertical screens.

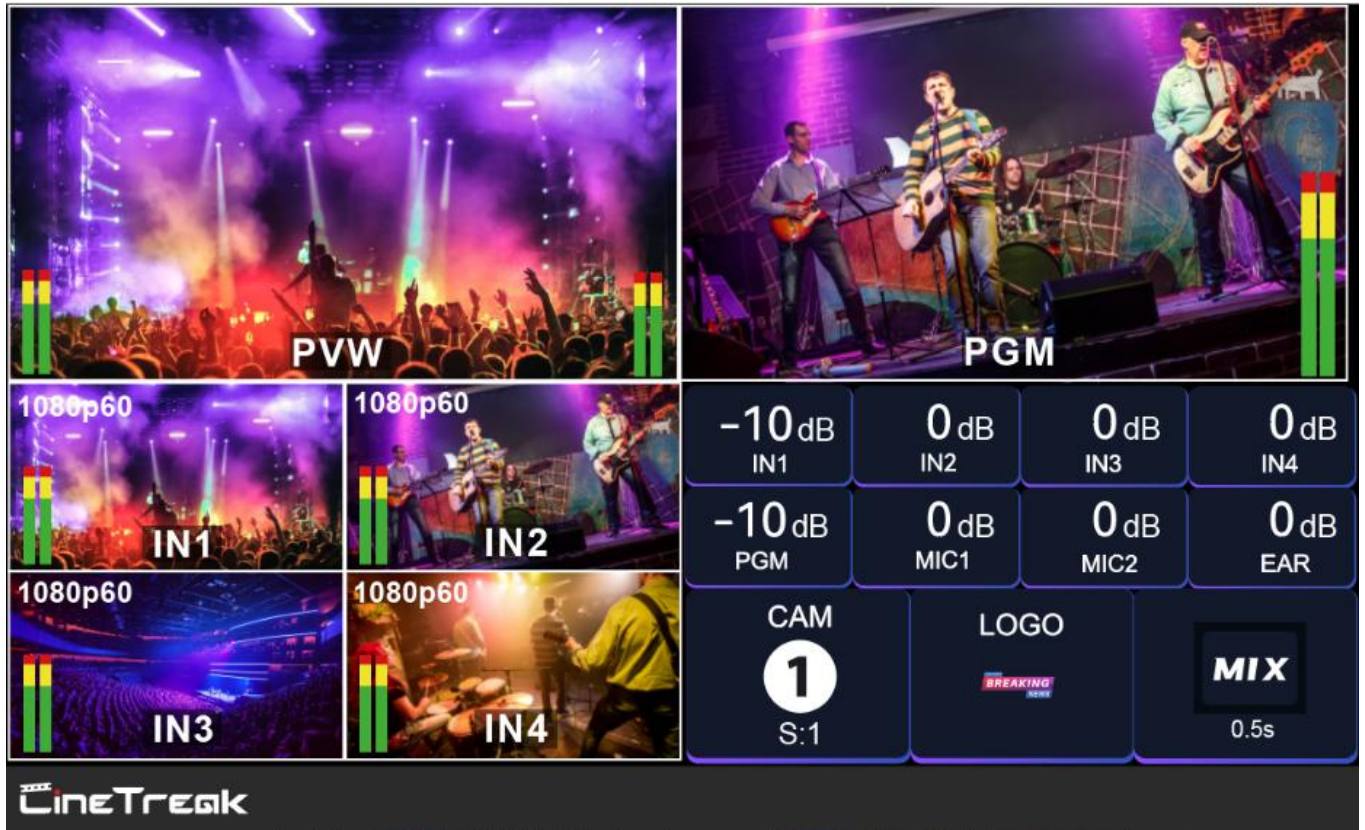


LCD landscape screen

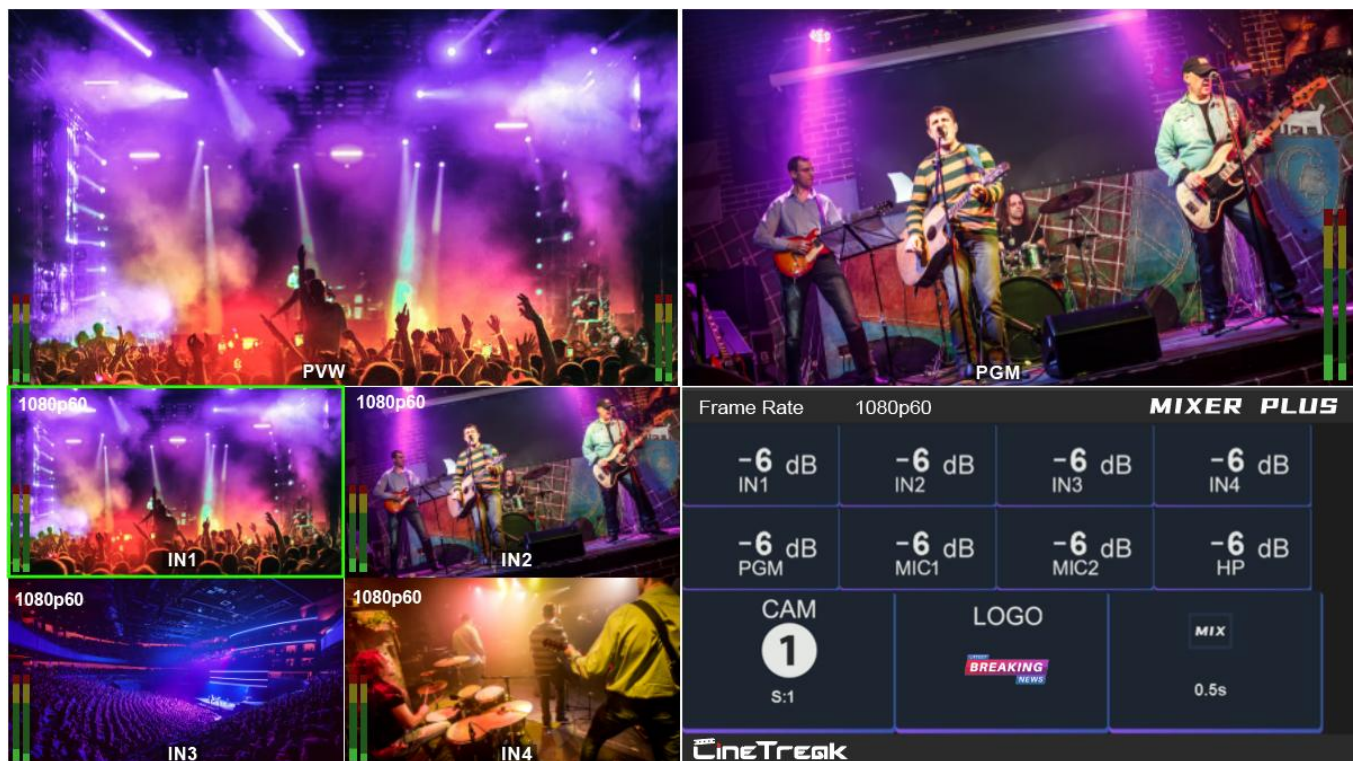

Multi-View Horizontal Screen



LCD vertical screen

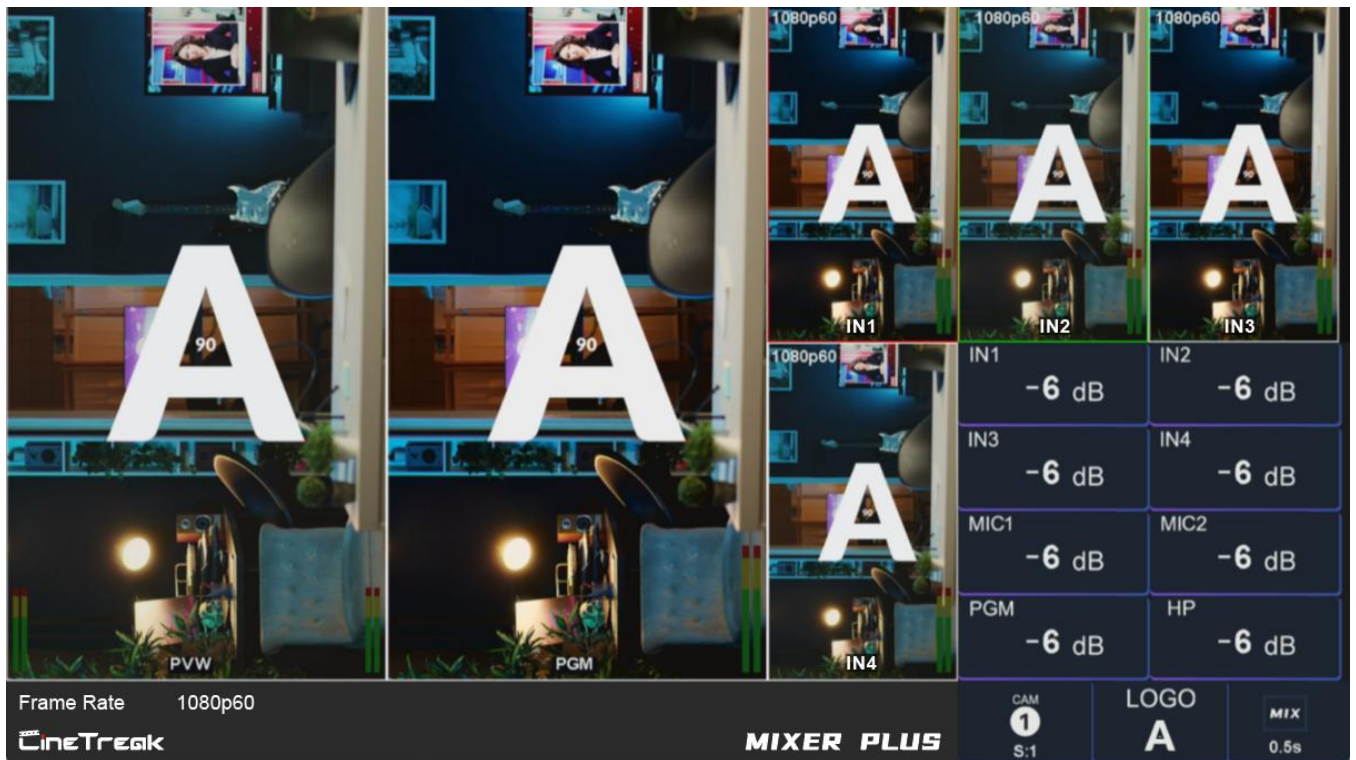


Multi-view Vertical Screen

7.9.2 PGM Output


Enter the port Settings, click PGM out to set the picture output by PGM port. You can select IN1, IN2, IN3, IN4, PAT, Clean PGM, PGM, Clean PVW, PVW, MV.

7.9.3 AUX Output

Enter the port Settings, click AUX out-AUX out, and set the image output from the AUX port. You can select IN1, IN2, IN3, IN4, PAT, Clean PGM, PGM, Clean PVW, PVW, MV.

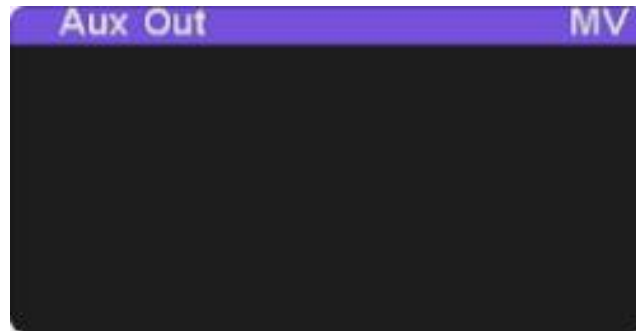

LCD AUX output Settings

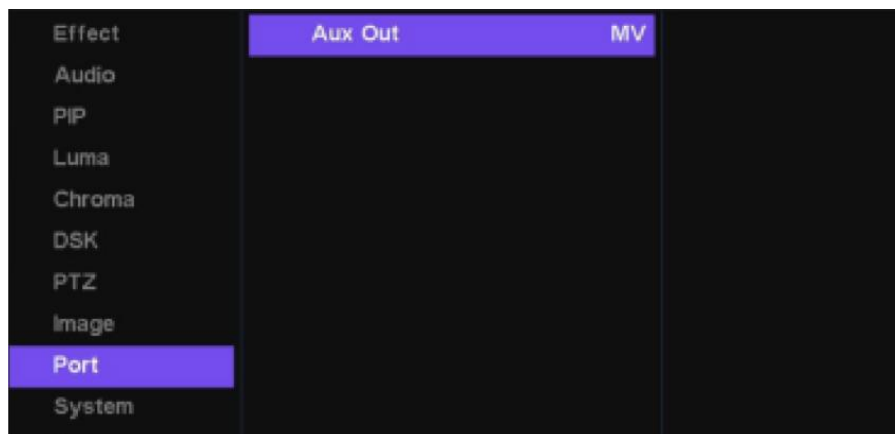

MV Multi-screen AUX output Settings

7.9.4 LCD Output


Enter the port settings, click LCD output to set the single screen displayed on the machine's built-in screen. You can select IN1, IN2, IN3, IN4, PAT, Clean PGM, PGM, Clean PVW, PVW, MV. Click the MV button, and the button light will turn off. The machine's screen will display the configured image.

7.9.5 Frame Rate Setting

Enter the port Settings, click frame rate, and set the output frame rate by rotating the knob. You can select 1080p24, 1080p25, 1080p30, 1080p48, 1080p50, 1080p60, 1080i60, 1080i50. The default is p60.

7.9.6 Input Source Screen Flip

Enter the port setting, click the screen flip to enter the screen flip setting page, you can set the IN1/2/3/4 input signals to screen flip setting, you can set off, horizontal, vertical, horizontal & vertical.

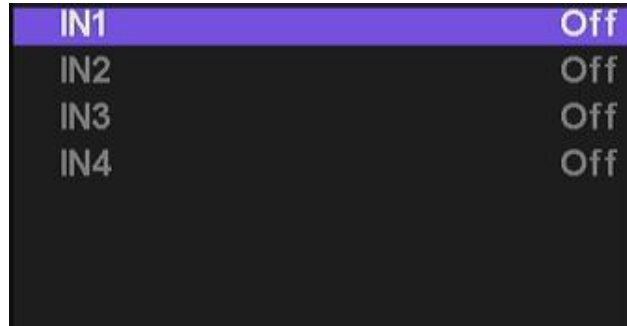


LCD input source screen flip setting



MV multi-screen input source screen flip setting

7.10 System

Enter the system Settings to set the language, backlight, network, etc.

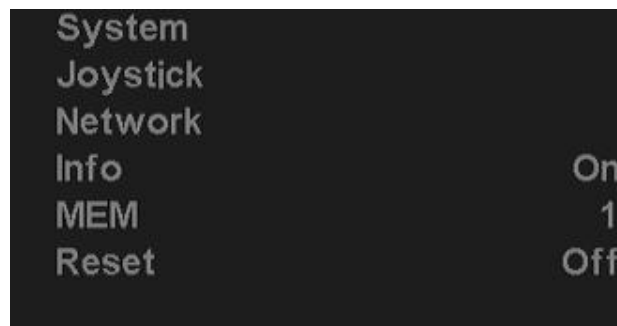

LCD System Settings

Effect	System	
Audio	Joystick	
PIP	Network	
Luma	Info	Off
Chroma	MEM	1
DSK	Reset	Off
PTZ		
Image		
Port		
System		

MV multi-screen system Settings

7.10.1 System Settings

Enter the Settings page, click on System Settings to set the language, OSD time, backlight, and button brightness.

Language	English
OSD Timer	30s
Backlight	80
Key light	Middle
Version	V1101010

System Settings

Effect	Language	English
Audio	OSD Timer	30s
PIP	Backlight	80
Luma	Key light	Middle
Chroma	Version	V1101010
DSK		
PTZ		
Image		
Port		
System		

MV multi-screen system Settings

7.10.1.1 Language Settings

Enter the system Settings page, click system-language, here you can set Chinese or English.

7.10.1.2 OSD Time Setting

Enter the system Settings page and click System-OSD Time to set the OSD time to 10 seconds, 30 seconds, or 60 seconds. The default is 30 seconds.

7.10.1.3 Backlight

Go to the system Settings page, click System-backlight, and adjust the screen backlight by turning the knob from 0 to 100. The higher the value, the brighter the screen. The default is 80.

7.10.1.4 Key Brightness

Enter the system Settings page, click system-button brightness, set the brightness of the button lights to low, medium and high.

7.10.1.5 Version Information

Enter the system Settings page, click on the system, and the version number of the software is displayed in Version.

7.10.2 T-Bar Calibration


Enter the system Settings page, click the joystick calibration, and calibrate the T-bar according to the prompts.

Abnormal situation calibration:


When the keys are abnormal, PTZ calibration is needed to restore normal operation.

7.10.3 Network Settings

Enter the system Settings page, click Network to enter the network Settings page. When DHCP Settings is turned off, you can manually set IP, mask, and gateway; when DHCP Settings is turned on, you can automatically obtain network addresses.

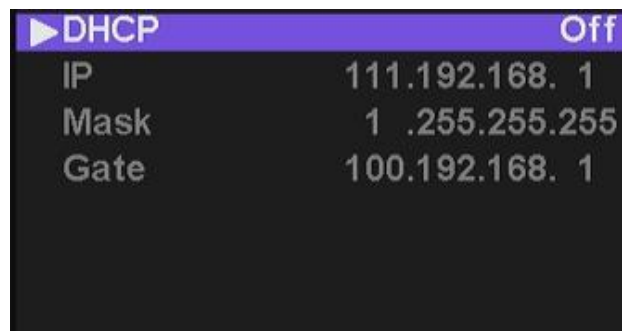

LCD network Settings

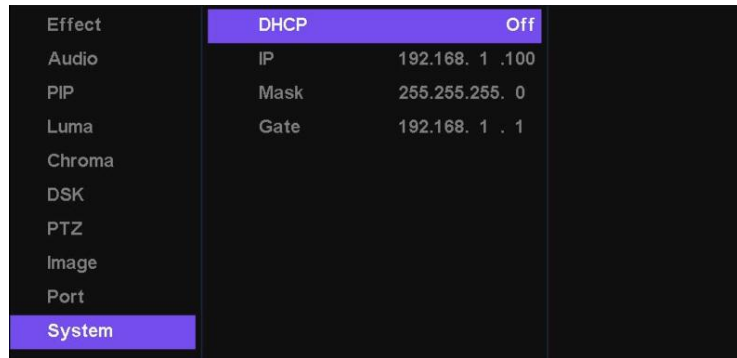

Network Settings for MV Multi-screen

7.10.4 Signal Status


Enter the system Settings page and click signal status to set the switch of signal status. When on, the resolution of four input signals can be displayed. The default is off.

7.10.5 MEM Settings


The MEM function can save four custom configurations.

Enter the system Settings page, click MEM to enter the MEM Settings page, select the MEM channel to be saved, then save the selected open, and click the knob to save the channel user Settings.

Enter the system Settings page-MEM-MEM channel, select the channel to be called, click the MEM button, you can call the Settings saved in the channel.

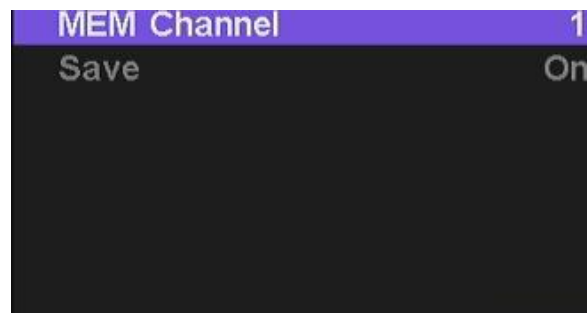

LCD MEM settings

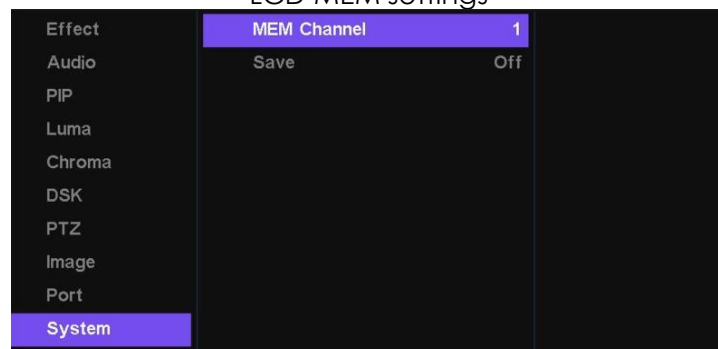

MEM setting for MV multi-screen

7.10.6 Reset



Enter the system Settings, reset the selection to "on", click the knob, you can carry out the reset operation.

8. Host Computer Software

8.1 Connect To The Host Computer Software

8.1.1 Computer Connect To The Host Computer Software

Connect the switcher to the network. Open the host software on your computer. Click the 'Find' button to search for and display the switcher's IP address in the network. Ensure the computer and switcher are on the same network segment. Click the Connect button to enter the host interface. Note: The computer and switcher must be on the same network segment.

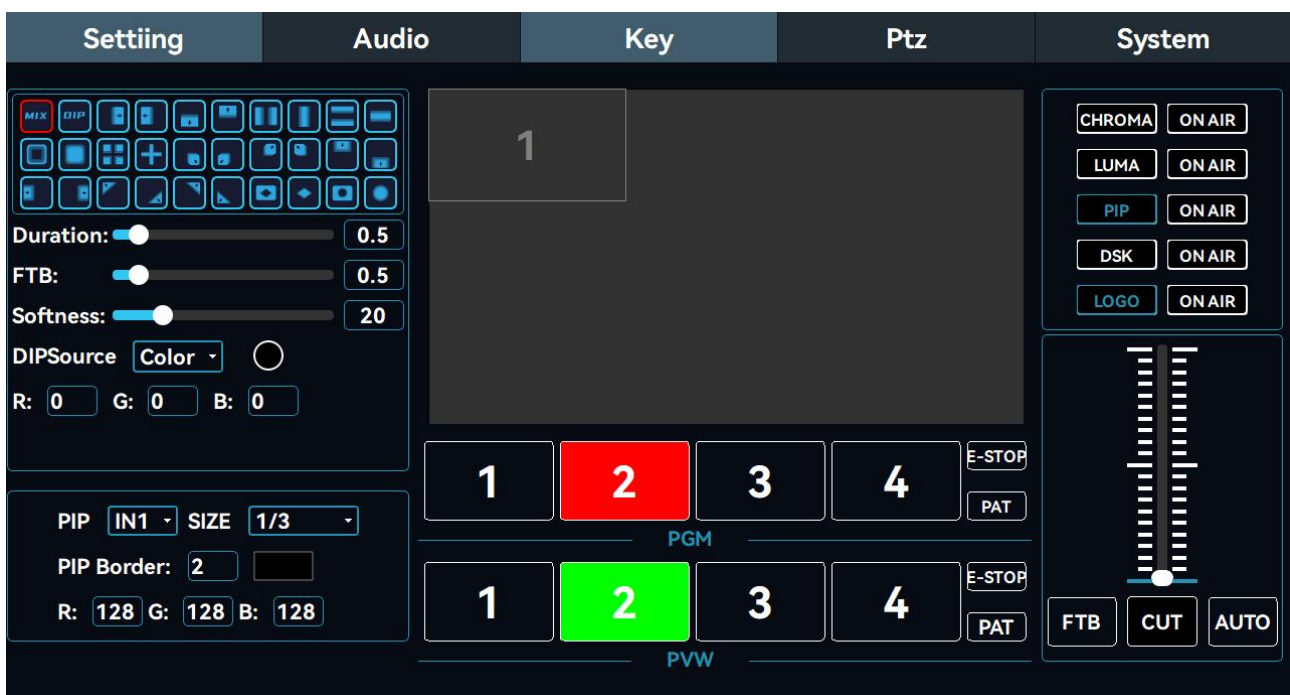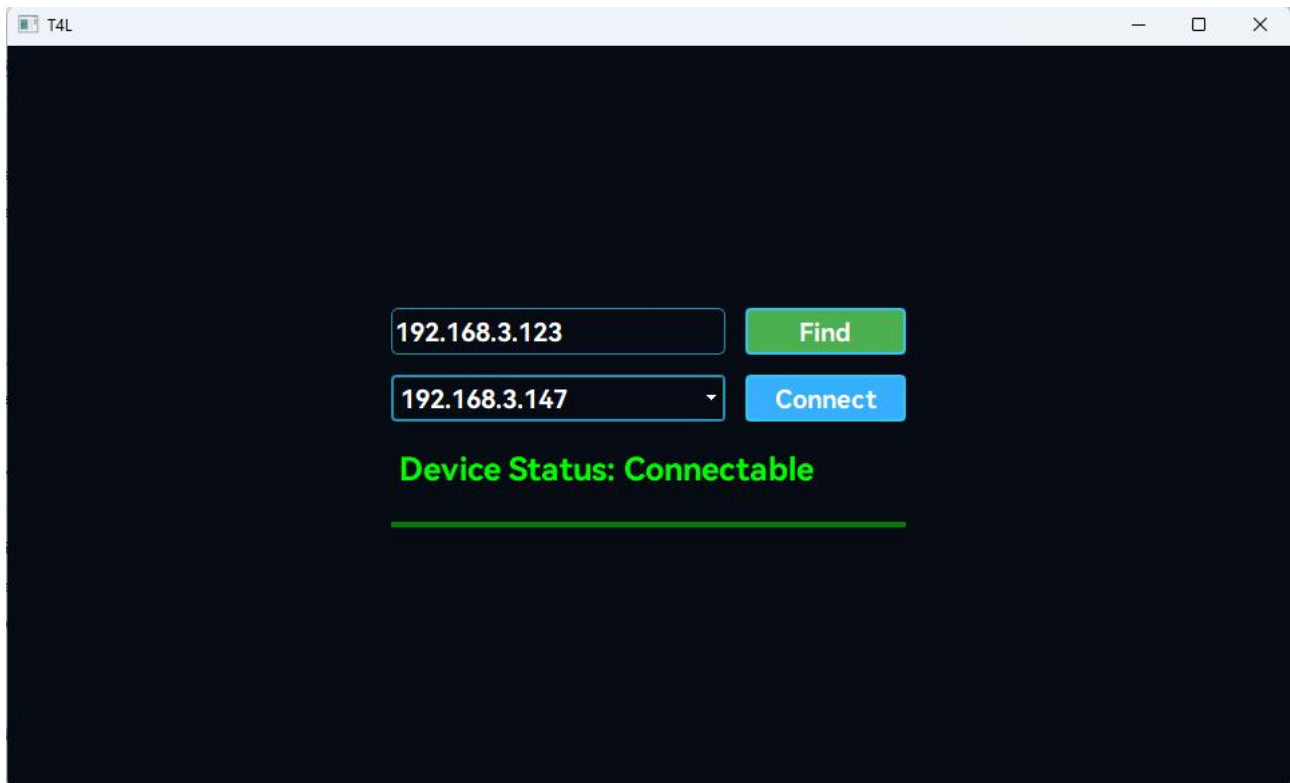

8.2 Settings Page

In the settings page, you can set transition, picture-in-picture, key on/off, and PGM/PVW source.

8.2.1 Transition Setting Menu

Enter the settings page of the host computer software. In the transition menu, you can set the transition effect, transition duration, FTB duration, softening degree and DIP source.




Click the color displayed on the right side of the DIP source. Select the color in the color selector that pops up. Click OK button to set the color of the DIP source.




8.2.2 Picture-In-Picture Setup Menu

Enter the settings page of the host computer software. In the picture-in-picture menu, you can select the source of the picture-in-picture, set the size and set the border.

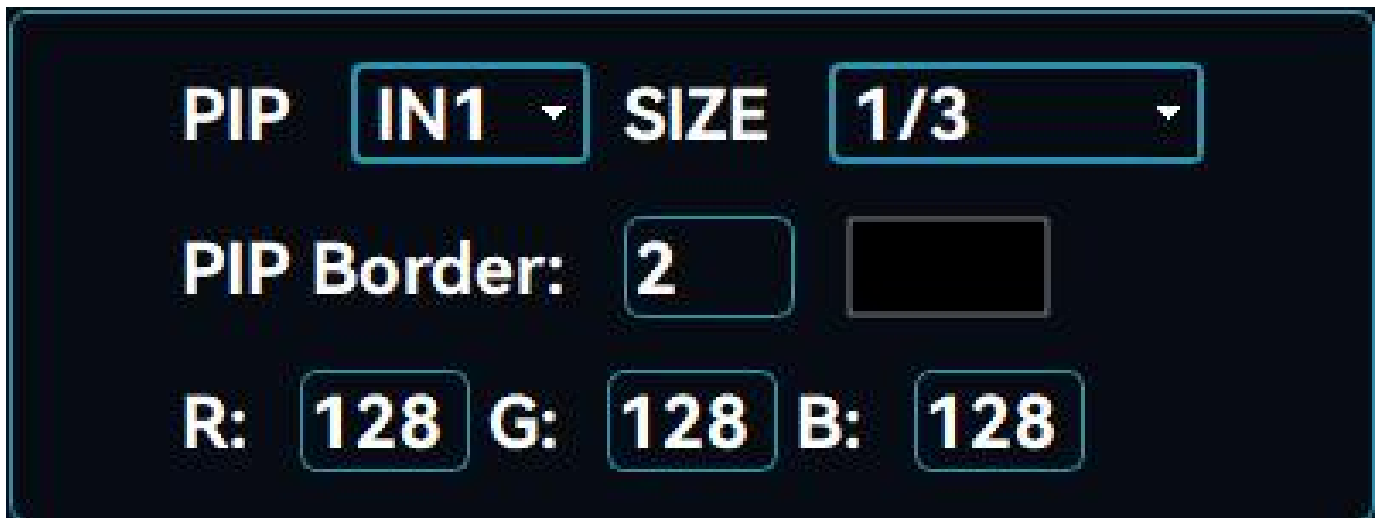

Click the color on the right side of the border to display the color. Select the color in the color selector that pops up, and click OK button to set the border color.

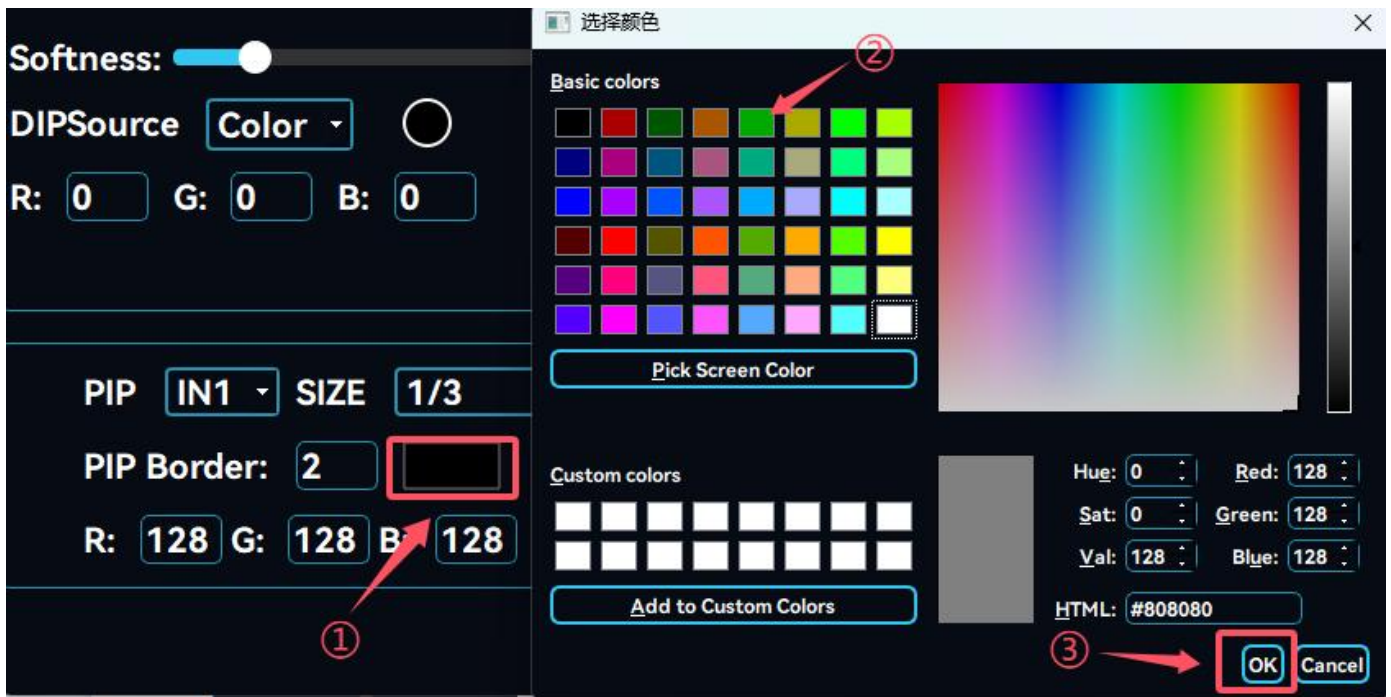


8.2.3 Key ON/OFF Setting Menu

Enter the settings page of the host computer software. In the key on/off menu, you can set the on/off status of chroma key, Luma key, picture-in-picture, DSK and LOGO in PVW/PGM.




8.2.4 Transition Menu

Enter the settings page of the host computer software. In the transition menu, click the CUT button to perform a non-effects transition; click AUTO and push the push rod to perform an effects transition; click FTB to perform a black screen operation.

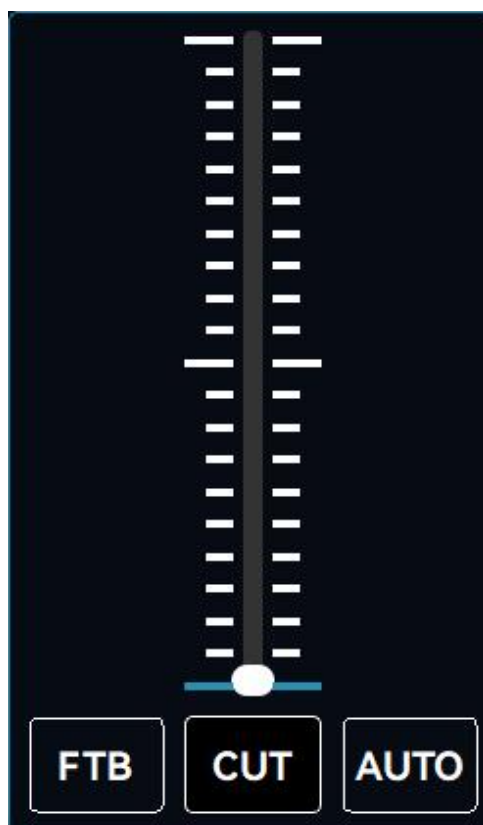


8.3 Audio Settings Page

On the audio page, you can control 4 channels of input audio, 2 MIC audio, 1 headphone monitor audio and PGM audio.

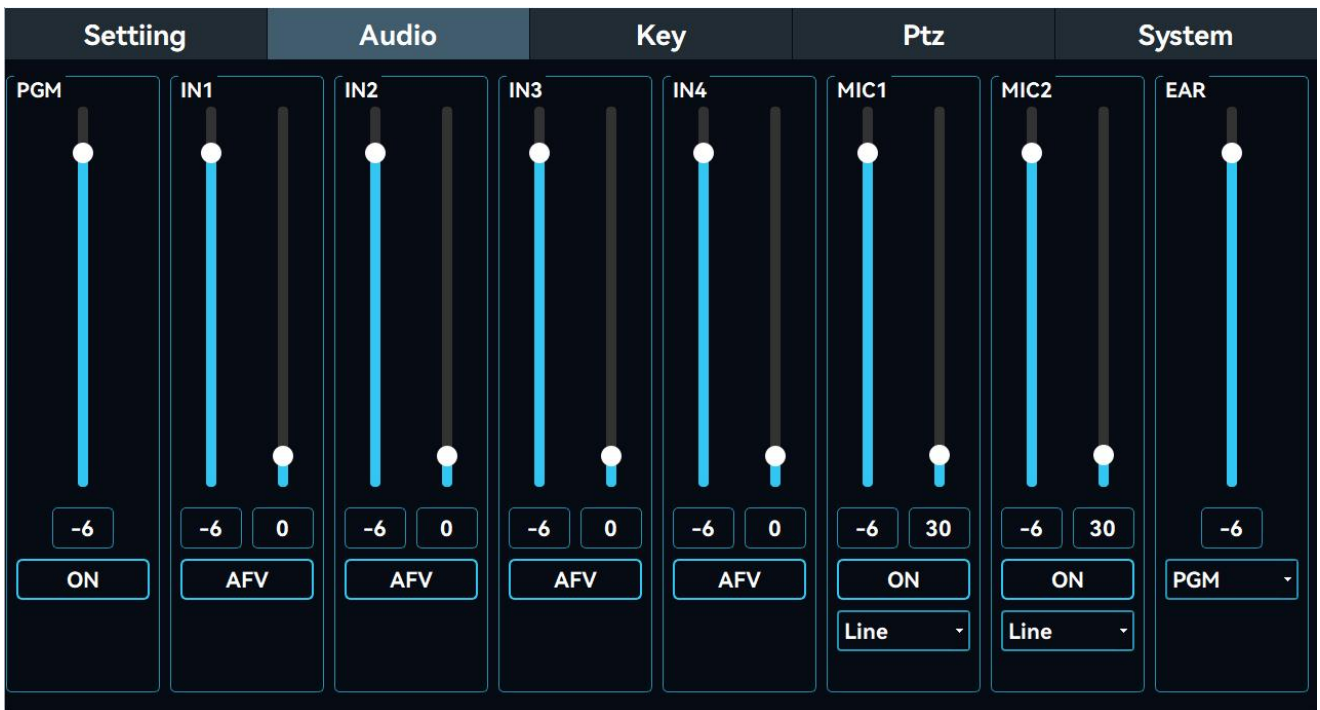

8.4 Key Settings Page

On the key page, you can set the Luma key, chroma key, and DSK.

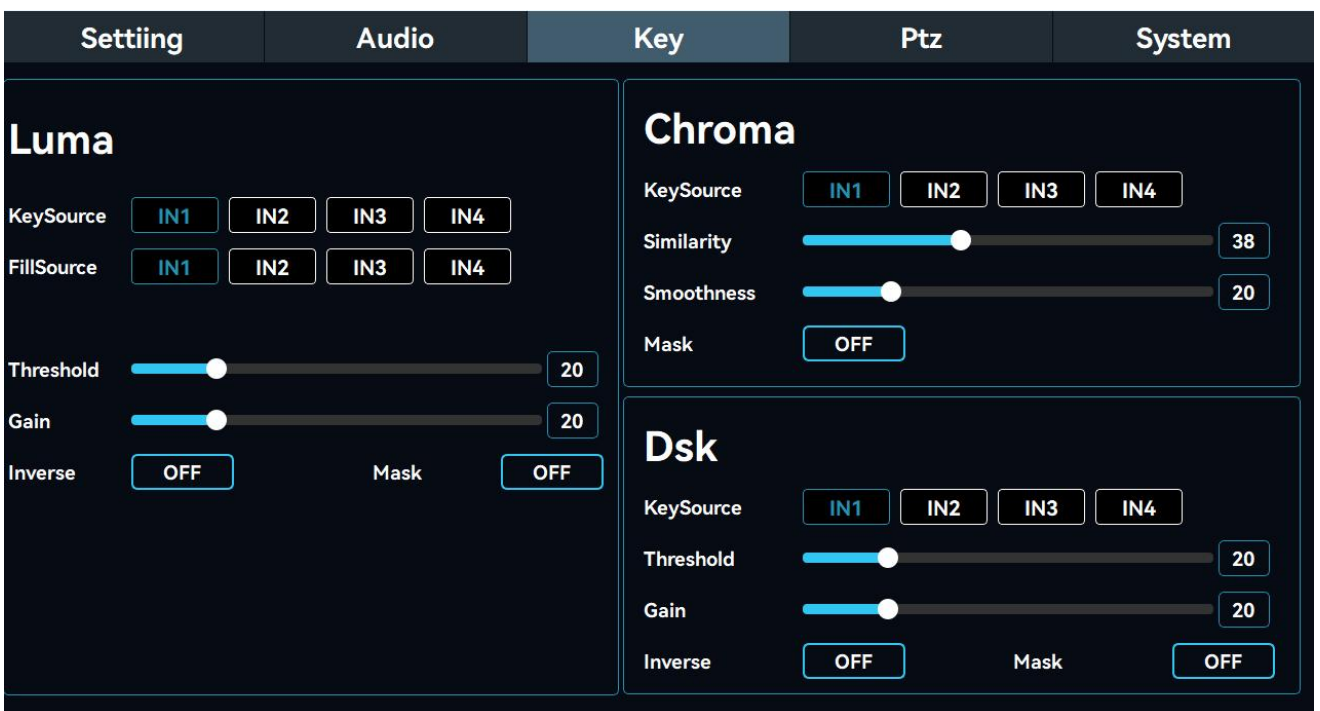

8.5 PTZ Camera Settings Page

On the PTZ camera page, you can set the IP address of the camera, and set the focus, exposure, white balance, and camera lens movement speed.

Setting	Audio	Key	Ptz	System
PTZ L-up UP R-up CAM1: 192.168.12.100 LEFT STOP RIGHT CAM2: 192.168.12.101 Ldown DOWN Rdown CAM3: 192.168.12.102 CAM4: 192.168.12.103 IP Speed <input type="range"/> 1				
Auto Focus: ON ExposureMode Auto Manual Shutter Pri Iris Pri				
WB AWB ON Red Gain 250 Blue Gain 5				

8.6 System Settings Page

In the system Settings page, you can set PAT, interface, screen flip, language and reset.

Setting	Audio	Key	Ptz	System
E-STOP: ColorBar Color Color Select: Green R: <input type="range"/> 0 G: <input type="range"/> 0 B: <input type="range"/> 255 PGM Out: MV AUX Out: MV LCD Out: PGM Frame Rate: 1080P60 View: 0°				
IN1: OFF Hor Ver Hor&Ver IN3: OFF Hor Ver Hor&Ver IN2: OFF Hor Ver Hor&Ver IN4: OFF Hor Ver Hor&Ver				
Language 中文 English ReSet: Reset Logo Update: F:/图像视频素材/q2_logos/logo4.png Select Update Pat Update: F:/图像视频素材/q2_images/pat1.bmp Select Update				

8.6.1 LOGO UPDATE

In the logo update module, click "Select", choose the logo image to be uploaded, and then click "Update" to upload the logo; the name of the logo image should be set as LOGO1/LOGO2/LOGO3/LOGO4



8.6.2 PAT Update

In the PAT update module, click "Select", choose the PAT image to be uploaded, and then click "Update" to upload the PAT; set the PAT name as PAT1/PAT2. (The format of the PAT image must be bmp.)





Cinetreak Technology



Cinetreak.global



www.cinetreak.com



support@cinetreak.com



RoHS
made in china

