



HMD 300 HMD 300 S HMD 300 X3K1

Quick Guide

Kurzanleitung

Guide rapide

Guida rapida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótki instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Γρήγορος οδηγός

Kısa Kılavuz

Краткая инструкция

快速指南

快速使用指南

クイックガイド

퀵 가이드

SENNHEISER



www.sennheiser.com/documentation



www.sennheiser.com/download

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com


Publ. 02/26, 597290/A03

In the box


HMD 300

HMD 300 S

HMD 300 X3K1

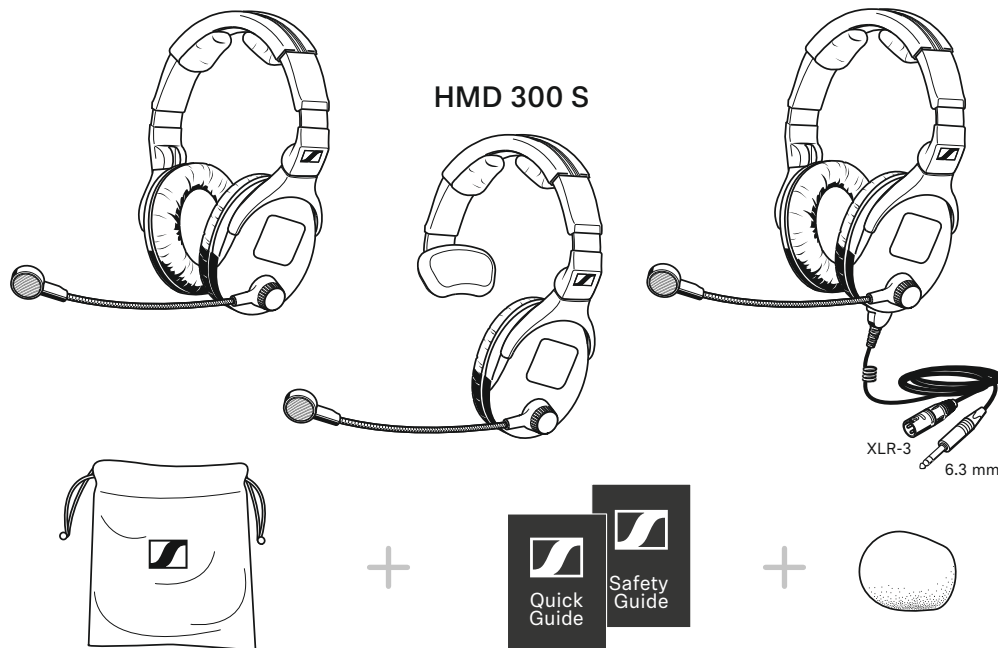

Connecting the headset

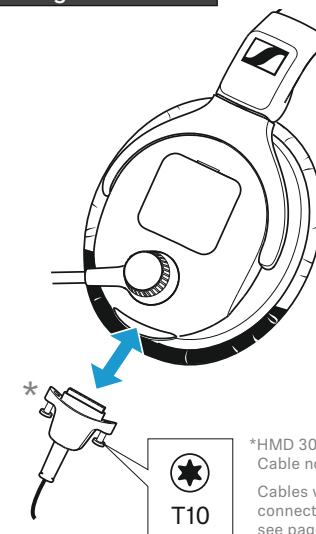


*HMD 300 | HMD 300 S:
Cable not included
Cables with different
connectors available
see page 2

Connect the cable to the headset and your system.



Set your audio source to a medium level.




Wearing the headset

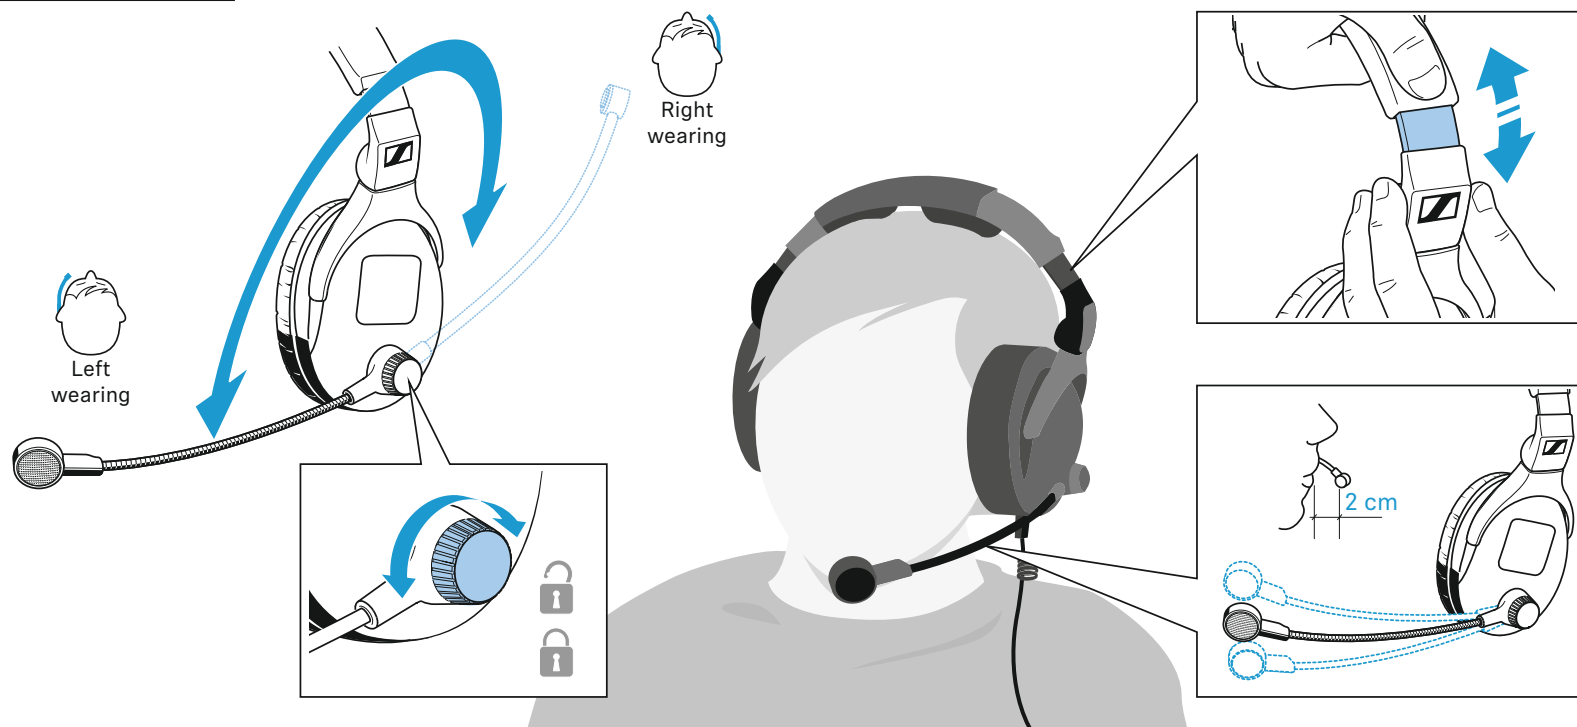



ActiveGard™

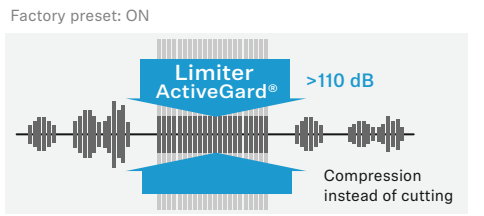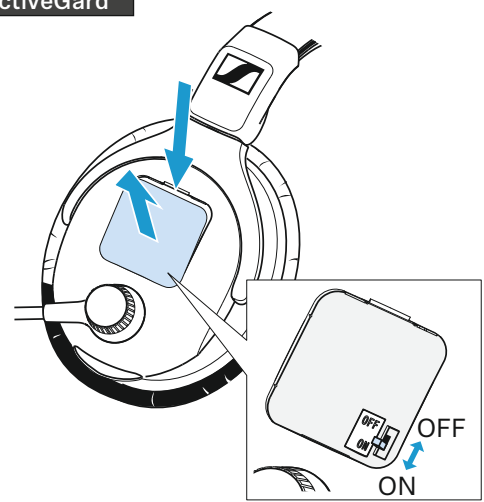


Using the windshield

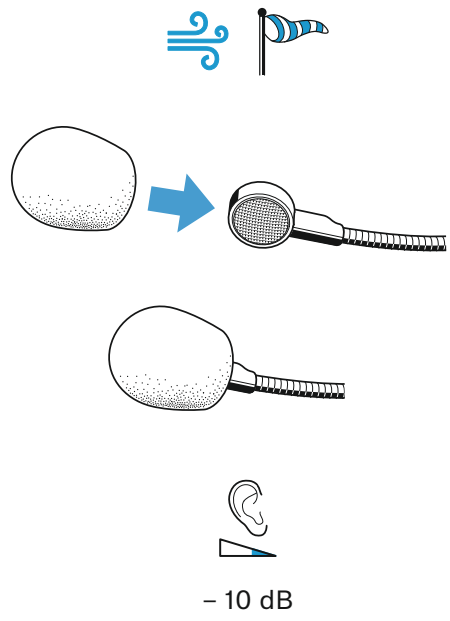


Replacing headband / ear pad(s)

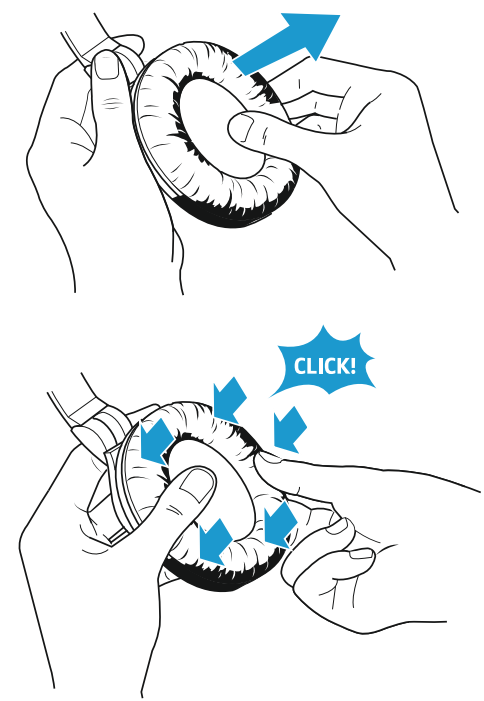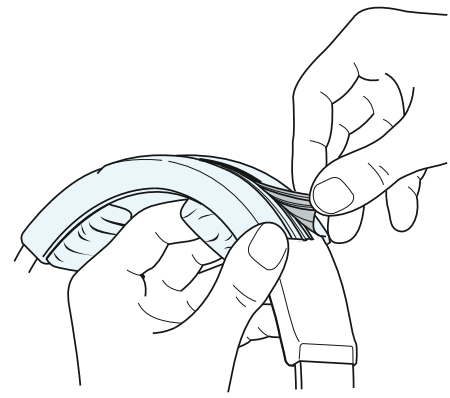

Cleaning

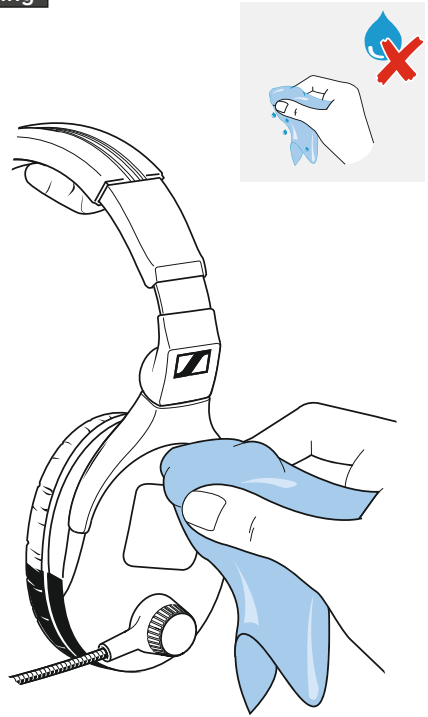

Available cables

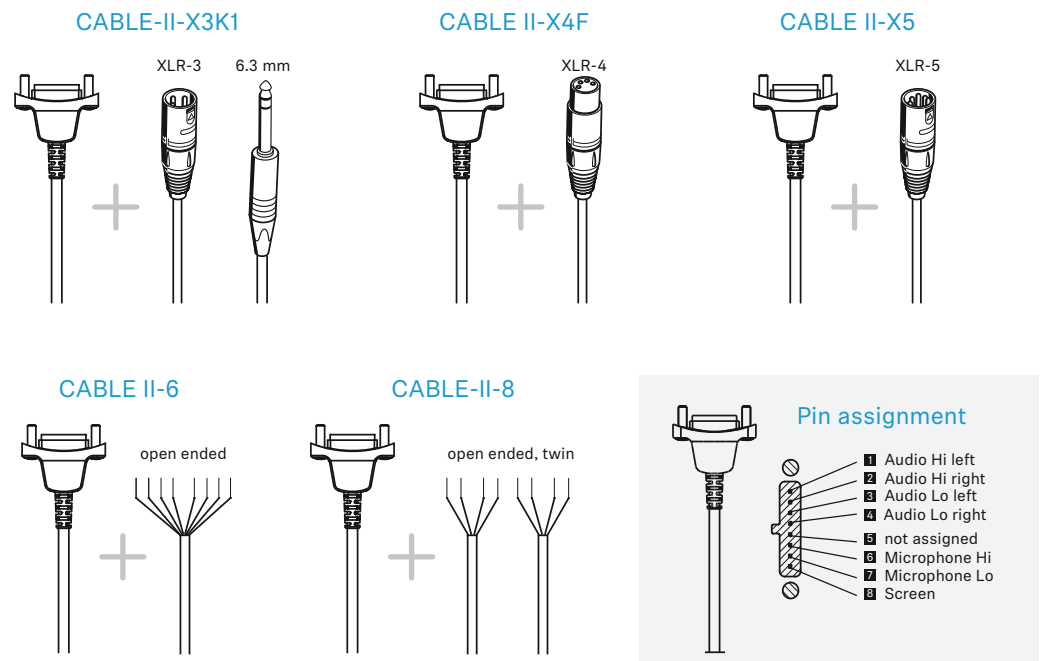

Specifications

Headphones	
Transducer principle	dynamic, closed
Ear coupling	circum-aural
Frequency response	60 - 25,000 Hz
Impedance	64 Ω
Characteristic SPL	96 dB SPL @ 1 kHz, 1 mW
ActiveGard Level	110 dB SPL @ 1 kHz
Max SPL (ActiveGard off)	123 dB SPL
THD	< 0.1 % @ 1 kHz, 100 dB SPL
Contact pressure	6.0 N
Microphone	
Type	BMD 434-300
Transducer principle	dynamic
Frequency response	40 - 18,000 Hz
Output voltage	0.5 mV/Pa @ 1 kHz
Directivity	hyper cardioid
Impedance	300 Ω
Interface	balanced
General data	
Temperature range	
Operation	-15 °C to +55 °C
Storage	-40 °C to +70 °C
Weight without cable	
HMD 300/HMD 300 X3K1	320 g
HMD 300 S	240 g